


Panasonic®

Functional Instructions

LCD Projector

Model No. **PT-AE4000E**

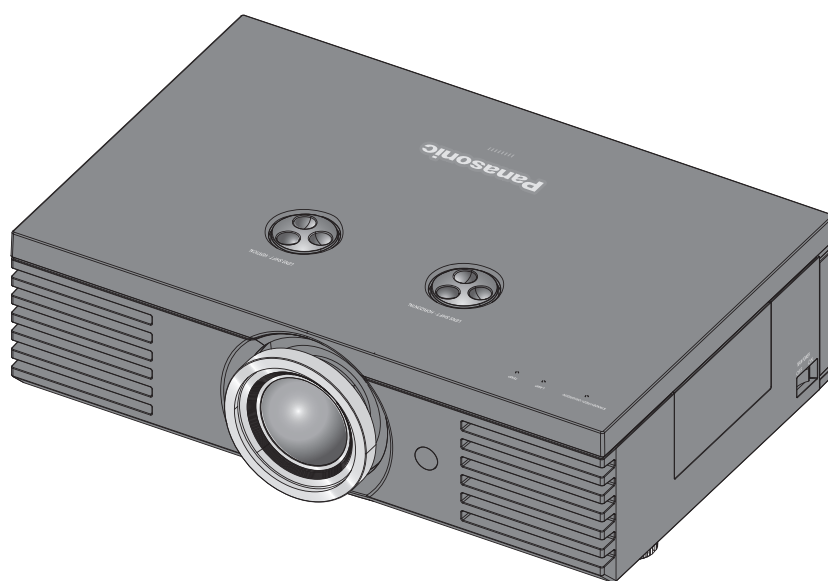

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



Thank you for purchasing this Panasonic product.

For your own safety, please read "Precautions with regard to safety" of the operating instructions carefully before operating your projector.

TQBJ0314

ENGLISH

Contents

Quick steps

1. Set up your projector

See "Setting up" on page 4.



2. Connect with other devices

See "Connections" on page 8.



3. Prepare the remote control

See "Remote control" of the operating instructions.



4. Start projecting

See "Switching the projector on/off" on page 9.



5. Adjust the image

See "Menu Navigation" on page 16.

Getting Started

Setting up..... 4

Screen size and throw distance 4

Projection method 5

Front leg adjusters and throwing angle 5

Lens shift and positioning..... 6

Connections 8

Before connecting to the projector 8

Connecting example: COMPONENT IN/

S-VIDEO IN/VIDEO IN..... 8

Connecting example: HDMI IN/

COMPUTER IN 8

Basic Operation

Switching the projector on/off 9

Mains lead 9

Power indicator 10

Switching on the projector 11

Switching off the projector 11

Projecting an image 12

Selecting the input signal 12

Positioning the image 12

Remote control operation 13

Operating range 13

Managing the lens control settings..... 13

Switching the picture mode 13

Adjusting the image..... 13

Loading a saved setting 14

VIERA Link 14

Adjusting the signal condition

with a waveform 14

Capturing an image 14

Resetting to the factory default settings 14

SUB MENU 15

Switching the input signal..... 15

Using the assigned function

as a shortcut..... 15

Settings

Menu Navigation	16
Navigating through the MENU	16
Menu list	17
PICTURE menu	20
PICTURE MODE	20
CONTRAST	20
BRIGHTNESS	20
COLOUR	20
TINT	20
SHARPNESS	20
COLOUR TEMPERATURE	21
DYNAMIC IRIS	21
WAVEFORM MONITOR	21
SPLIT ADJUST	22
ADVANCED MENU	23
MEMORY SAVE	30
MEMORY LOAD	31
MEMORY EDIT	31
SIGNAL MODE	31
POSITION menu	32
H-POSITION	32
V-POSITION	32
DOT CLOCK	32
CLOCK PHASE	32
ASPECT	32
WSS	34
OVER SCAN	34
KEystone	34
AUTO SETUP	34
LENS CONTROL	35
ZOOM/FOCUS	35
LENS MEMORY LOAD	35
LENS MEMORY SAVE	35
LENS MEMORY EDIT	36
AUTO SWITCHING	36
H-AREA POSITION	37
V-AREA POSITION	37
LEFT MASKING AREA	37
RIGHT MASKING AREA	37
UPPER MASKING AREA	37
LOWER MASKING AREA	37

FUNCTION BUTTON	38
OPTION menu	39
INPUT GUIDE	39
OSD DESIGN	39
OSD POSITION	39
BACK COLOUR	39
STARTUP LOGO	39
AUTO SEARCH	39
HDMI SIGNAL LEVEL	39
FRAME RESPONSE	39
INSTALLATION	39
TRIGGER 1/2 SETTING	40
SLEEP	41
HIGH ALTITUDE MODE	41
LAMP POWER	41
VIERA LINK SETTINGS	41
TEST PATTERN	41
LAMP RUNTIME	41


Appendix

Technical Information	42
Serial terminal	42
VIERA Link Connection	45
Summary of VIERA Link features	45
VIERA Link "HDAVI Control™"	46
Option menu	47
Index	48
Trademark acknowledgements	50

Setting up

Screen size and throw distance

You can adjust the projection size with 2 × zoom lens. Calculate and define the throw distance as follows.

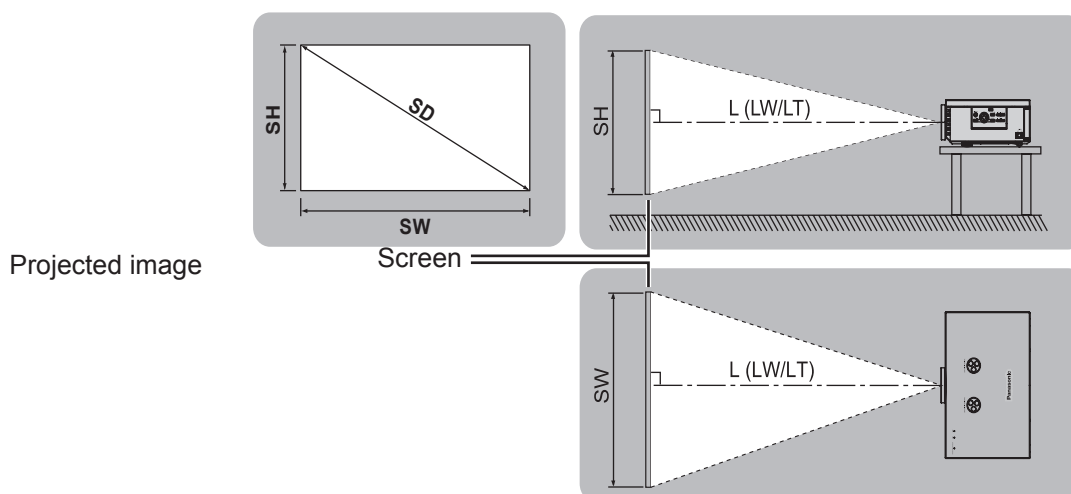

All measurements and the calculation results below are approximate and may differ from the actual measurements.

Screen Diagonal (SD)	Throw distance (16:9)		Throw distance (2.35:1)	
	Minimum distance (LW)	Maximum distance (LT)	Minimum distance (LW) ^{*1}	Maximum distance (LT)
1.02 m (40")	1.2 m (3'11")	2.3 m (7'6")	1.3 m (4'3")	
1.27 m (50")	1.5 m (4'11")	2.9 m (9'6")	1.6 m (5'3")	2.3 m (7'6")
1.52 m (60")	1.8 m (5'10")	3.5 m (11'5")	1.9 m (6'2")	2.8 m (9'2")
1.78 m (70")	2.1 m (6'10")	4.1 m (13'5")	2.2 m (7'2")	3.3 m (10'9")
2.03 m (80")	2.4 m (7'10")	4.7 m (15'5")	2.6 m (8'6")	3.8 m (12'5")
2.29 m (90")	2.7 m (8'10")	5.3 m (17'4")	2.9 m (9'6")	4.2 m (13'9")
2.54 m (100")	3.0 m (9'10")	5.9 m (19'4")	3.2 m (10'6")	4.7 m (15'5")
3.05 m (120")	3.6 m (11'9")	7.2 m (23'7")	3.8 m (12'5")	5.7 m (18'8")
3.81 m (150")	4.5 m (14'9")	9.0 m (29'6")	4.8 m (15'9")	7.1 m (23'3")
5.08 m (200")	6.0 m (19'8")	12.0 m (39'4")	6.4 m (21'0")	9.6 m (31'6")
6.35 m (250")	7.6 m (24'11")	15.0 m (49'2")	8.0 m (26'3")	12.0 m (39'4")
7.62 m (300")	9.1 m (29'10")	18.0 m (59')	9.6 m (31'6")	14.4 m (47'2")

*1. When using both 2.35:1 and 16:9 aspect images onto a 2.35:1 sized screen.


Calculation methods for screen dimensions

You can calculate more detailed screen dimensions from the screen diagonal.

	16:9 size	2.35:1 size
Screen height (SH)	= SD (m) × 0.490	= SD (m) × 0.392
Screen width (SW)	= SD (m) × 0.872	= SD (m) × 0.920
Minimum distance (LW)	= SD (m) × 1.189 – 0.04	= SD (m) × 1.256 – 0.04
Maximum distance (LT)	= SD (m) × 2.378 – 0.05	= SD (m) × 1.899 – 0.05

NOTE:


- You can tilt the projector body less than approximately ±30 ° vertically and ±10 ° horizontally. Overtilting may result in shortening the component's life.
- Do not cover the air exhaust/intake ports or place anything within 50 cm (19 5/8") of them.

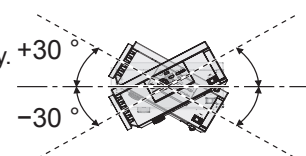

Projection method


You can use the projector with any of the following 4 projection methods. To set the projector in the desired method, see “INSTALLATION” on page 39.

■ Setting on a desk/floor and projecting from front

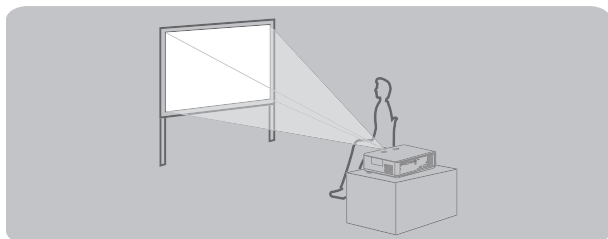


INSTALLATION: FRONT/DESK

■ Setting on a desk/floor and projecting from rear

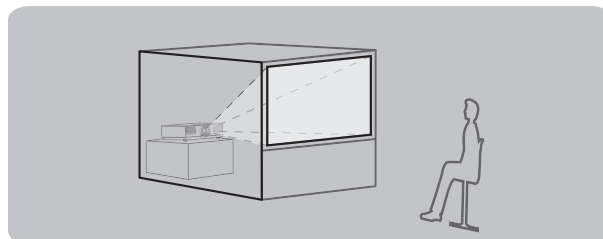


INSTALLATION: REAR/DESK

■ Mounting on the ceiling and projecting from front

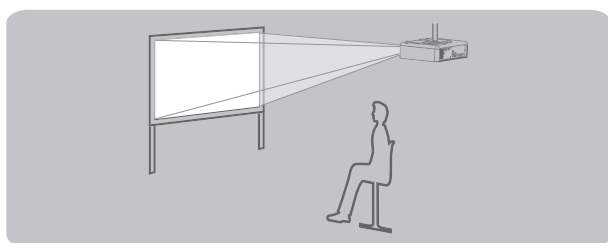

INSTALLATION: FRONT/CEILING

■ Mounting on the ceiling and projecting from rear

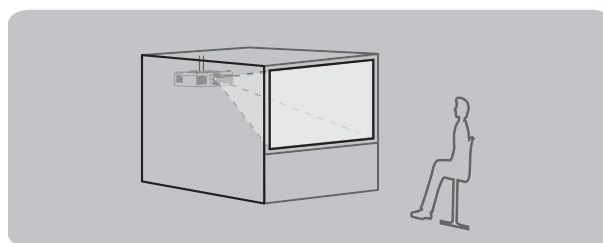



INSTALLATION: REAR/CEILING

NOTE:

- A translucent screen is required for rear projection.
- When mounting the projector on the ceiling, the optional ceiling mount bracket (ET-PKE2000, ET-PKE1000S) is required.
- See “Ceiling mount bracket safeguards” in “Technical Information” of the operating instructions.

Front leg adjusters and throwing angle

You can screw up/down the front leg adjusters to control the angle of the projector for adjusting the throwing angle. See “Positioning the image” on page 12.

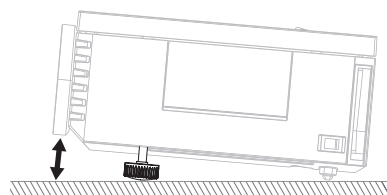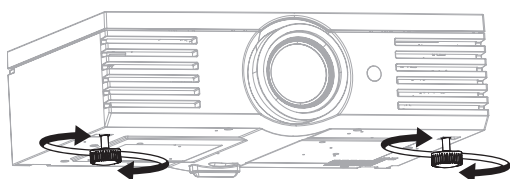

NOTE:

- Heated air comes out of the air exhaust port. Do not touch the air exhaust port directly.
- If keystone distortion occurs, see “KEYSTONE” on page 34.
- Screw up the front leg adjusters, and an audible click will be heard as the limit.


Lens shift and positioning

If the projector is not positioned right in front of the centre of the screen, you can adjust the projected image position by moving the lens shift dials within the shift range of the lens.

■ Adjusting the lens shift dials


● Horizontal shift

You can place the projector where the projector lens is up to 40 % horizontally off-centre from the screen and then adjust the image position with the **Lens shift dial • Horizontal**.

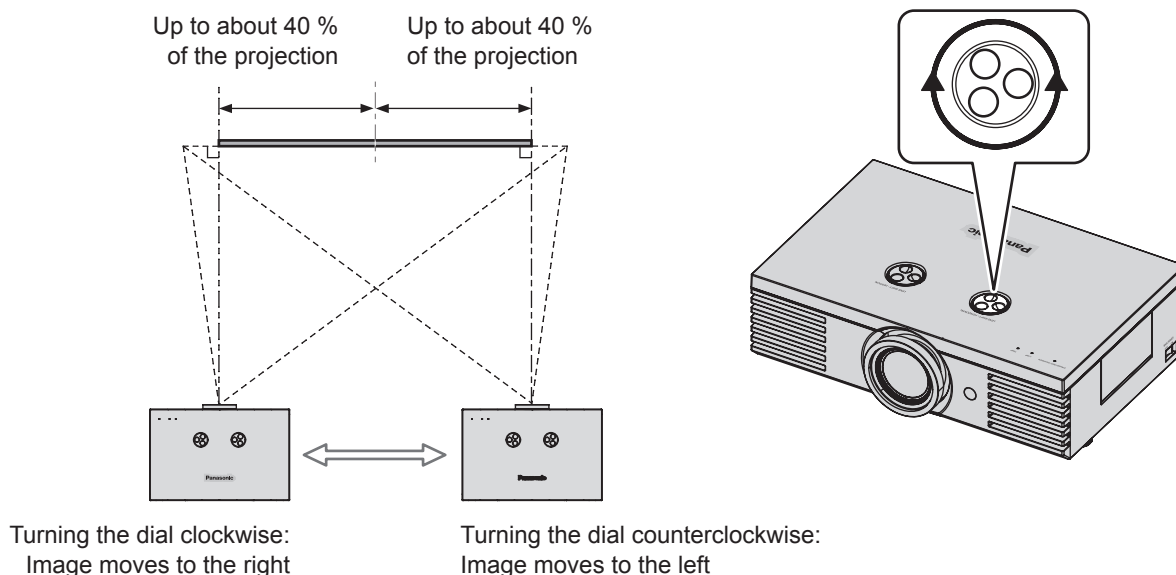

● Vertical shift


You can place the projector where the projector lens is up to 100 % vertically off-centre from the screen and then adjust the image position with the **Lens shift dial • Vertical**.

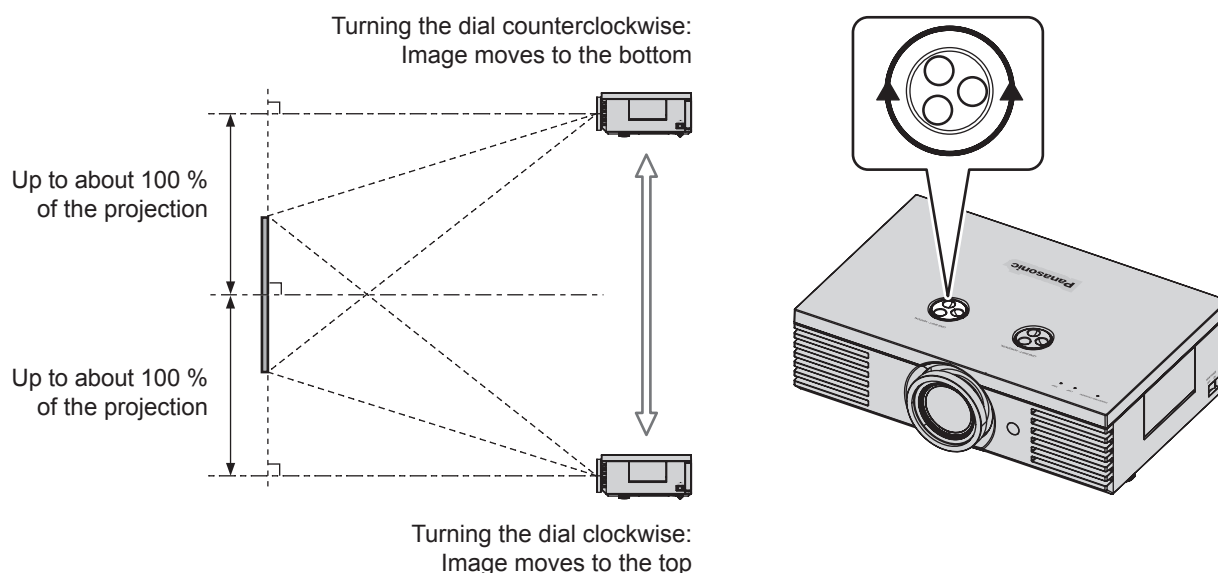


■ Projector location range

You can determine where to locate the screen and the projector by considering the lens shift possibilities.

● When the screen position is fixed

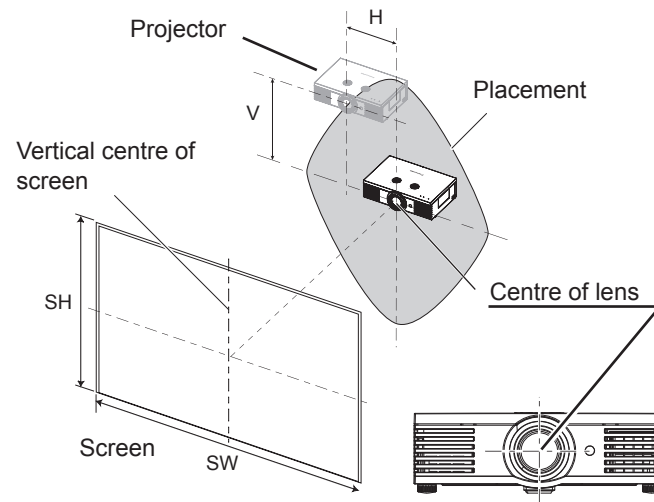

● When the projector position is fixed

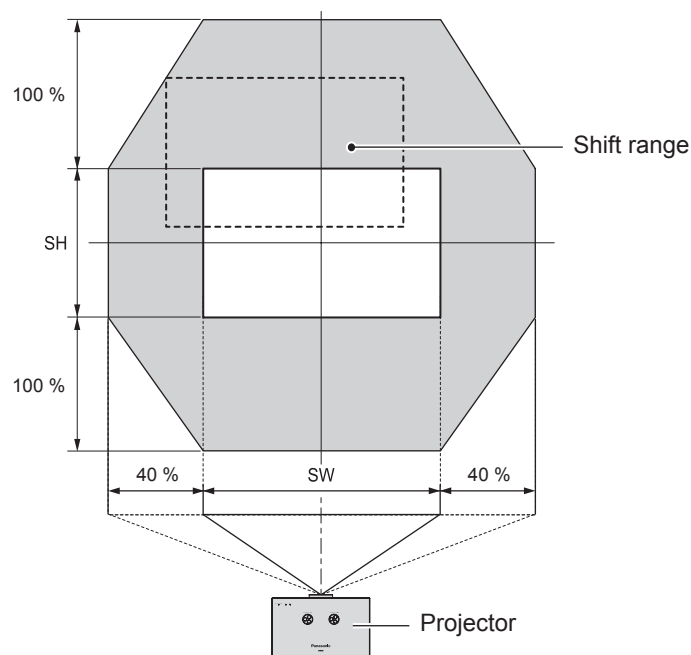

NOTE:


- When the projector is located right in front of the centre of the screen and the lens shift dials are centred, you will get the best quality of the projection image.
- When the **Lens shift dial • Vertical** is at the vertical limit of the shift range, you cannot turn the dial to the horizontal limit, likewise when the **Lens shift dial • Horizontal** is at the horizontal limit of the shift range, you cannot turn the dial to the vertical limit.
- When the projector is tilted and adjusting **KEYSTONE**, the centre of the screen and the lens need to be realigned.
- Do not force the lens shift dials to turn as this may damage the projector. Turning the dials maximum limit is 3 or 4 times from the default position.

Connections


Before connecting to the projector

- Read and follow the operating and connecting instructions of each peripheral device.
- The peripheral devices must be turned off.
- Use cables that match each peripheral device to be connected.
- Confirm the type of video signals. See “List of compatible signals” in “Technical Information” of the operating instructions.
- Audio cables must be connected from each peripheral device directly to the audio reproduction system.

Connecting example: COMPONENT IN/S-VIDEO IN/VIDEO IN

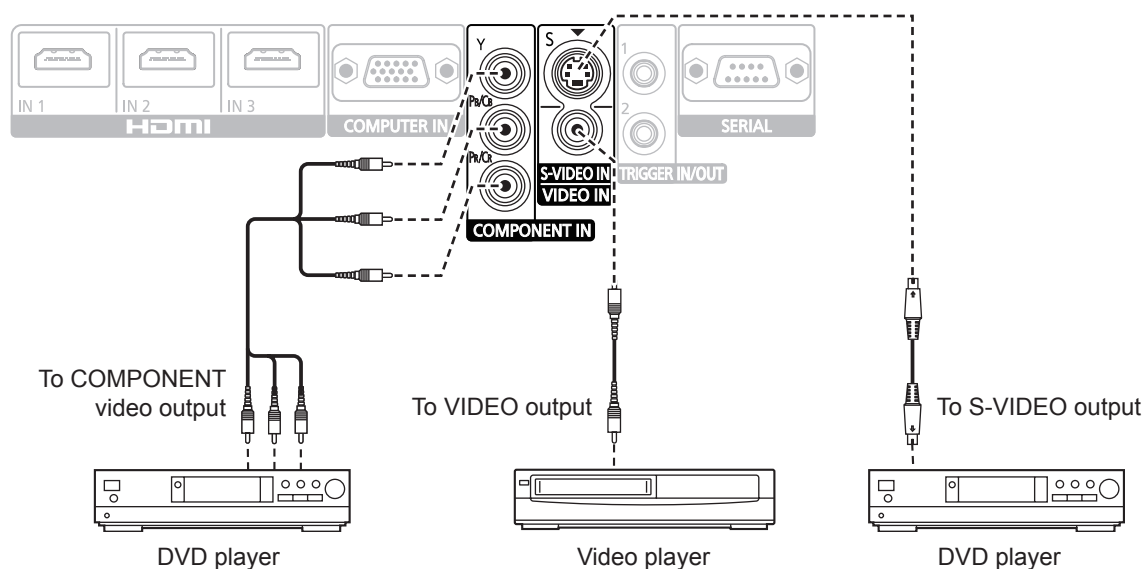

Connecting example: HDMI IN/COMPUTER IN

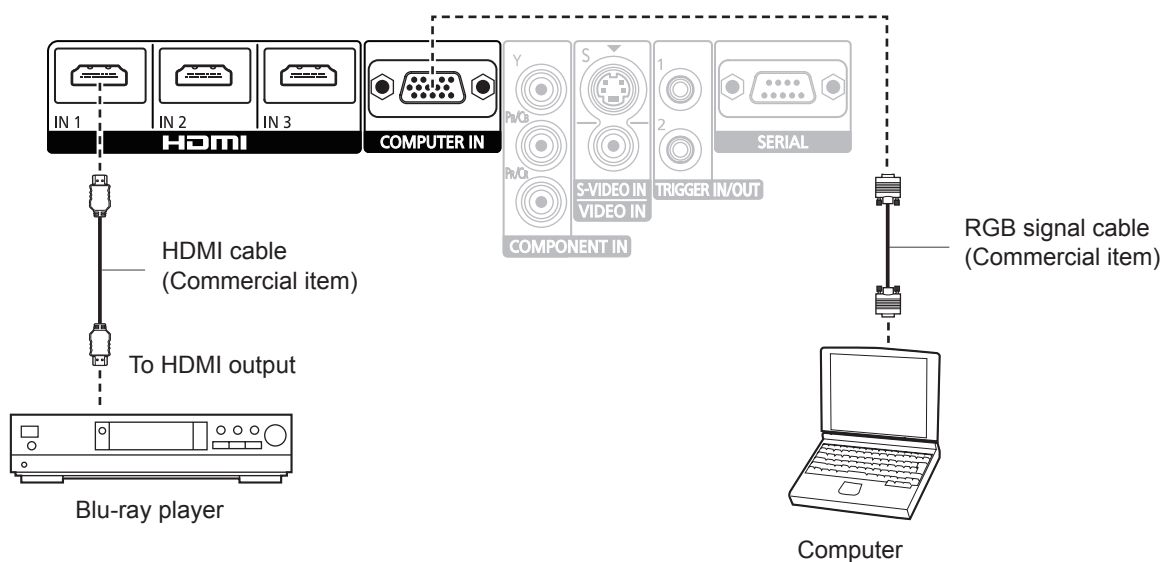

NOTE:


- Make sure the HDMI cable is adapted to your HDMI device for proper performance.
- A compatible cable is required for an HDMI 1 080p signal.
- It is possible to connect with DVI devices via a HDMI/DVI conversion adapter, but some equipment may not project the image properly or other problems could be encountered.
- Please tighten securely, fixing the screws on the connectors (D-SUB 15-pin) of the RGB signal cable.
- For more information about the serial terminals, see “Serial terminal” on page 42.

Switching the projector on/off


Mains lead

Connecting


1. Make sure the shape of the mains plug and the **AC IN** terminal on the back of the projector match, then push the plug all the way in.

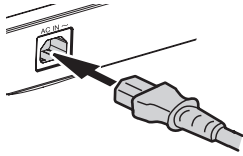

2. Align the side of the power cord secure lock with the side guide rail of the **AC IN** terminal of the projector and slide it in.

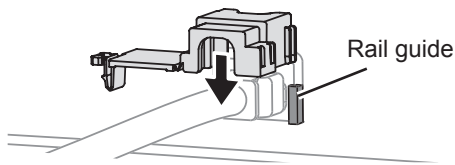


3. Place the latch to the latch catcher and press until it clicks.

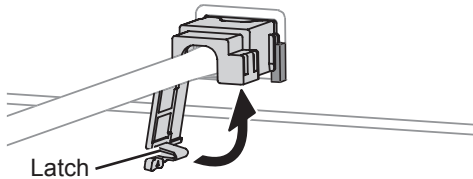


4. Connect the mains plug to a mains socket.

Disconnecting

1. Unplug the mains plug from the mains socket.
2. Depress the latch and slide the cover off.

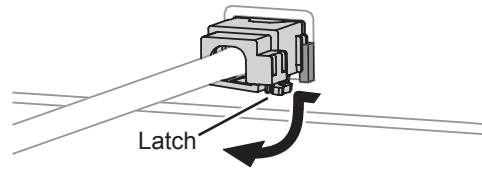

3. Slide the power cord secure lock up along the side guide rail.

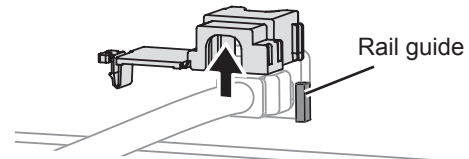

4. Hold the plug and unplug it from the **AC IN** terminal on the back of the projector.

NOTE:


- Do not use other than the provided mains lead.
- Ensure all the input devices are connected and turned off before connecting the mains lead.
- Do not force the connector as this may damage the projector and/or the mains lead.
- Dirt or dust build-up around plugs may cause fire or electrical hazards.
- Switch off the power to the projector when not in use.

Switching the projector on/off

Power indicator

Power indicator informs you of the status of the power.

- When the **TEMP** indicator is flashing, the power indicator will turn red, and you cannot switch on the power.

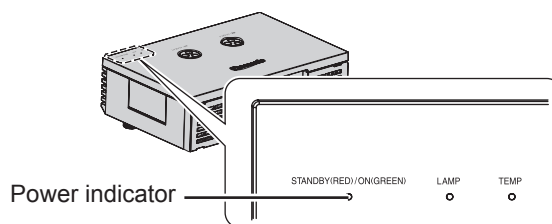


Indicator status		Status
No illumination or flashing		MAIN POWER is switched off.
Red	Lit	MAIN POWER is switched on and the projector is in standby mode.
	Flashing	MAIN POWER is switched on (standby mode) and the POWER ON LINK is set to ON . • The power consumption is not much different when it is lit. (See "VIERA Link Connection" on page 45)
Green	Flashing	The power button is switched on and the projector is getting ready to project.
	Lit	Projecting.
Orange	Lit	The power button is switched off and the projector is cooling the lamp.
	Flashing	The power button is switched on again when cooling the lamp and recovering to projection mode. Recovery may take a while.

NOTE:

- See "TEMP indicator" in "TEMP and LAMP Indicators" of the operating instructions.
- While the projector is cooling the lamp, do not switch **MAIN POWER** off or unplug the mains lead.
- The electric consumption in standby mode is 0.08 W.

Switching on the projector

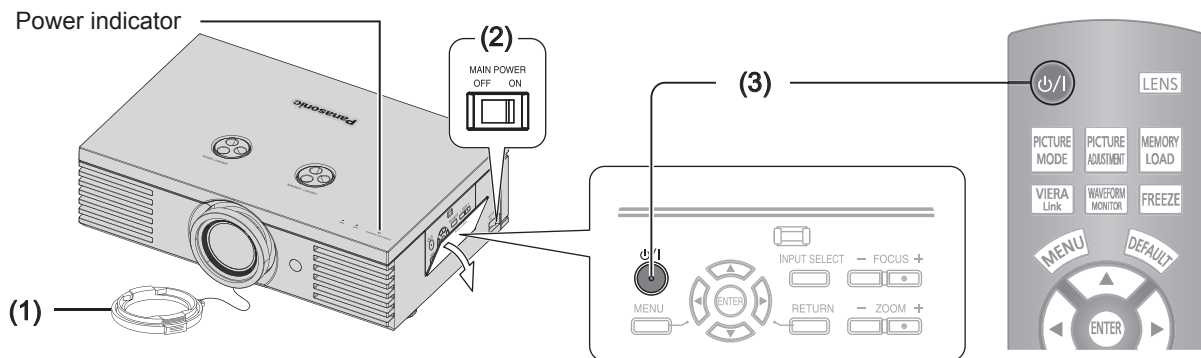


1. Remove the lens cover from the lens.
2. Switch **MAIN POWER** on.
 - The power indicator lights up in red.
3. Press the power button.
 - The power indicator lights up in green after flashing for a while.
 - The **STARTUP LOGO** is displayed on the screen. See "STARTUP LOGO" on page 39.

NOTE:

- When the internal cooling fan is operating, some operational sound may be heard. The loudness of the operational sound depends on the external temperature.
- You can reduce the operational sound by setting the **LAMP POWER** in **OPTION** menu to the **ECO-MODE**. See "LAMP POWER" on page 41.
- When starting up the projector, some small rattling or tinkling sound may be heard, or the display may flicker for the characteristics of the lamp. Those are normal and will not affect the performance of the projector.
- Do not attempt to modify the lens cover which may cause burns, fire or damage to the projector.

Switching off the projector

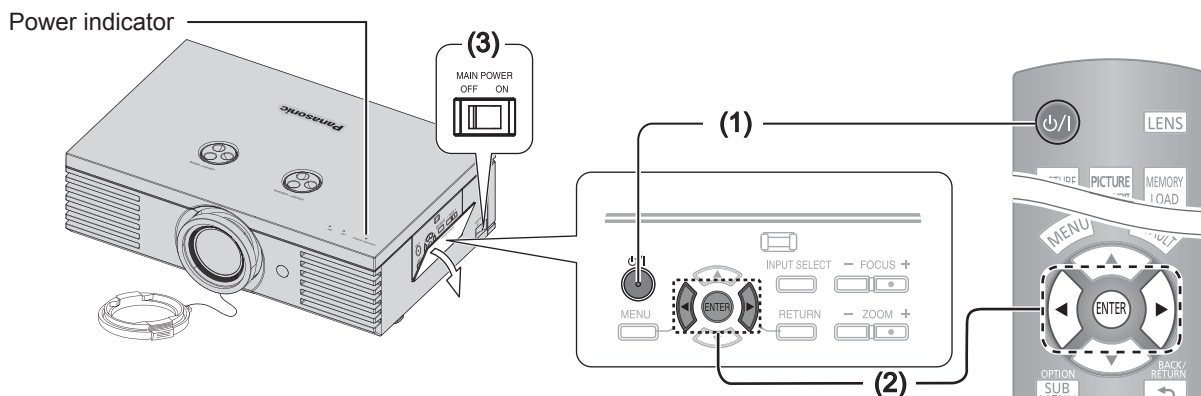

1. Press the power button.
 - The confirmation screen is displayed.
 - To return to the projection, press the **MENU** or **RETURN** button.
2. Press the power or **ENTER** button.
 - The power indicator lights up in orange while cooling the lamp, then illuminates red when it is ready to switch off **MAIN POWER**.
3. Switch off **MAIN POWER** on the left side of the projector.
4. Attach the lens cover.

NOTE:

- Press the power button twice or for a long duration to switch the power off.

Projecting an image

Selecting the input signal


1. Switch on the connected devices.
 - Press the play button of the required device.
2. Press the **INPUT SELECT** button to select the required input method if needed. See “Switching the input signal” on page 15.
 - The image will be projected on the screen.

NOTE:



- **AUTO SEARCH** is **ON** as default and the signal from the connected devices is detected automatically. See “AUTO SEARCH” on page 39.

Positioning the image

1. Adjust the projected image with the lens shift dials.
See “Lens shift and positioning” on page 6.
3. Adjust the focus and the projected image size.
 - Press +/- of the **FOCUS** and **ZOOM** buttons to adjust.
 - Press the **LENS** button to adjust the focus and zoom by the remote control. See “LENS CONTROL” on page 35.

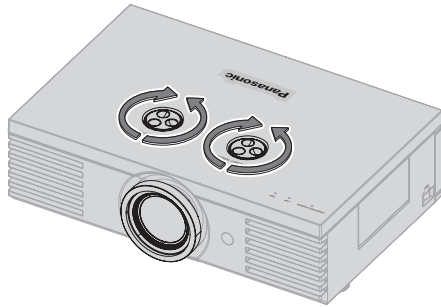

2. Adjust the angle of the projector.
 - Screw the front leg adjusters up/down and adjust the angle vertically.
 - See “Front leg adjusters and throwing angle” on page 5.

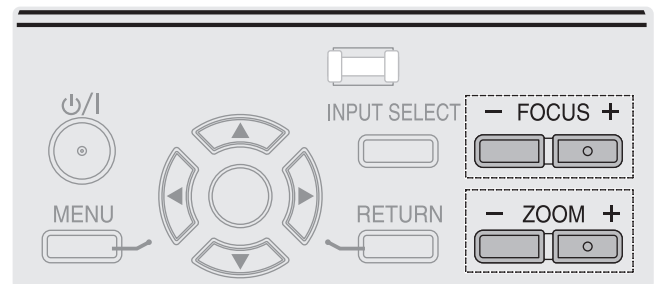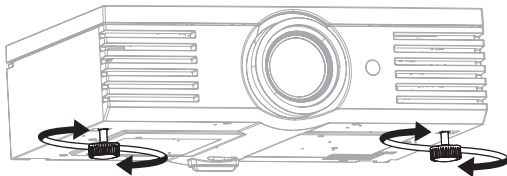


NOTE:

- Do not touch the air exhaust port as this may cause burns or injury.
- If keystone distortion occurs, see “KEYSTONE” on page 34.
- If you adjust the focus, you may need to adjust the size of the image by pressing the **ZOOM** button again.

Remote control operation

Operating range

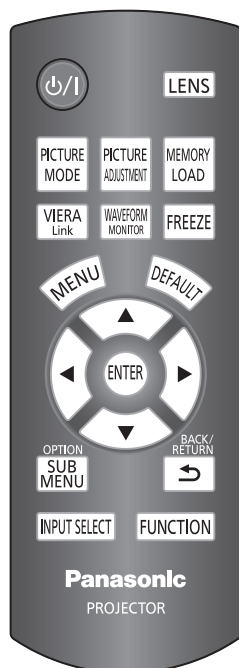

You can operate the projector with the remote control within the remote range of 7 m (22'11").

● Facing to the projector

Ensure the remote control emitter is facing the remote control signal receptor on the front of the projector and press the required buttons to operate.

● Facing to the screen

Ensure the remote control emitter is facing the screen and press the required buttons to operate the projector. The signal will be reflected off the screen. The operating range may differ due to the screen material. This function may not be effective with a translucent screen.

NOTE:

- Do not let strong light shine onto the signal receptor. The remote control may malfunction under strong light such as fluorescent light.
- If there are any obstacles between the remote control and the remote control signal receptor, the remote control may not operate correctly.


Managing the lens control settings

LENS You can adjust the focus and zoom of the projected image, and save the settings. Press the **LENS** button once to display the **LENS CONTROL** menu.

If you have saved Lens Memories, press the **LENS** button twice to load the saved memories instantly. And press the **LENS** button three times to go back to the **LENS CONTROL** menu. See "LENS CONTROL" on page 35.

Switching the picture mode

PICTURE MODE You can switch the preset picture mode settings by pressing the **PICTURE MODE** button. Press the button until the required setting is selected. See "PICTURE MODE" on page 20.

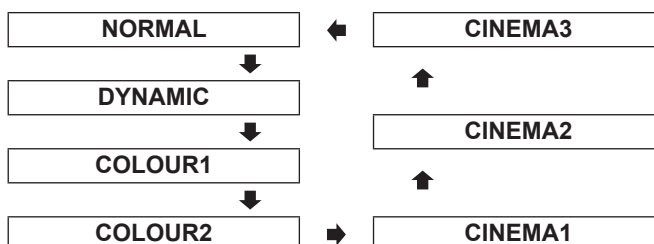

Adjusting the image

PICTURE ADJUSTMENT You can display the **PICTURE** and **ADVANCED MENU** menu items by pressing the **PICTURE ADJUSTMENT** button. Press the button to switch between **PICTURE** and **ADVANCED MENU** menu. Press **▲ ▼** to select the required menu item and **◀ ▶** to adjust.

- **PICTURE menu items**
PICTURE MODE, CONTRAST, BRIGHTNESS, COLOUR, TINT, SHARPNESS, COLOUR TEMPERATURE and DYNAMIC IRIS

- **ADVANCED MENU items**
GAMMA ADJUSTMENT, CONTRAST R/G/B, BRIGHTNESS R/G/B, NR, MPEG NR, FRAME CREATION, COLOUR MANAGEMENT, x.v.Colour, DETAIL CLARITY, CINEMA REALITY, TV-SYSTEM and RGB/YPbPr.

NOTE:

- For each menu item description, see "PICTURE menu" on page 20.
- The screen will be cleared after 7 seconds without any operation.
- The **GAMMA** setting is only available when the **GAMMA ADJUSTMENT** is set to **SIMPLE**.

Remote control operation

Loading a saved setting

MEMORY
LOAD

You can access saved settings instantly. See “MEMORY LOAD” on page 31.

1. Select the required setting from **MEMORY 1 - 16**.
 - Undefined setting will not be displayed.
2. Press the **ENTER** button to activate the selected setting.

NOTE:

- If you have not saved any settings, **MEMORY 1 - 16** will not be displayed.

VIERA Link

VIERA
Link

You can control some functions of the connected equipment with this projector remote control. See the operating instructions for more details.


Adjusting the signal condition with a waveform

WAVEFORM
MONITOR

You can display the image brightness and contrast level of the input signal with a waveform. See “WAVEFORM MONITOR” on page 21.

FULL SCAN	Monitoring the waveform of brightness and contrast of the whole image.
SINGLE LINE SCAN	Monitoring the waveform of brightness and contrast in each horizontal line of the image.

2. Press the **ENTER** button until the required waveform option is displayed.
 - In **FULL SCAN** mode, press **▲ ▼ ◀ ▶** to change the waveform position.
 - In **SINGLE LINE SCAN** mode, press **▲ ▼** to select the required line position.

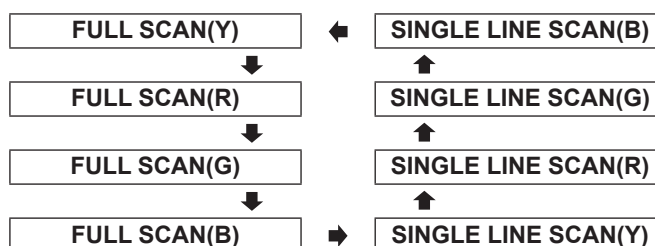

Displaying the waveform

1. Press the **WAVEFORM MONITOR** button and display the waveform monitor.
 - Press the **WAVEFORM MONITOR** button again to escape from the waveform mode.

NOTE:

- In **SINGLE LINE SCAN** mode, the position of the waveform monitor depends on the position of the selected line.
- You can display the main menu by pressing the **MENU** button and adjust the menu items.
- The called up menu items displayed position depends on the position of the waveform monitor.
- You can activate **AUTO ADJUST** of the **WAVEFORM MONITOR** menu by pressing the **DEFAULT** button.
- The signal which is lower than 0 % in the waveform will be displayed as same as 0 % on the projected image.
- While the waveform is displayed, you can not adjust the **COLOUR MANAGEMENT** settings.

Capturing an image

FREEZE

Press the **FREEZE** button to capture the image, and you can see it as a still picture while the AV equipment are still running. Press the **FREEZE** button again to escape and return to the continuing image.

While displaying the frozen image, you can enter the **AREA SELECT** mode of the **SPLIT ADJUST** menu by pressing the **ENTER** button. See “SPLIT ADJUST” on page 22.

Resetting to the factory default settings

DEFAULT

You can reset most of the customised settings to the factory defaults by pressing the **DEFAULT** button. Display the required sub-menu or the menu items and press the button.

NOTE:

- Some menu items are not available to reset by pressing the **DEFAULT** button. Adjust each menu item manually.

SUB MENU

SUB MENU

You can command the connected equipment to display their sub menu.


- It is used with the Link function (VIERA Link).

Switching the input signal

INPUT SELECT

You can switch the input method manually by pressing the **INPUT SELECT** button. Press the button several times or press **▲ ▼ ◀ ▶** to cycle through the input methods as follows. The actual projected image will be changed in a while.

- The graphical guidance will be displayed on the upper right of the projected image and you can confirm the selected input method which is highlighted in yellow. See "INPUT GUIDE" on page 39.

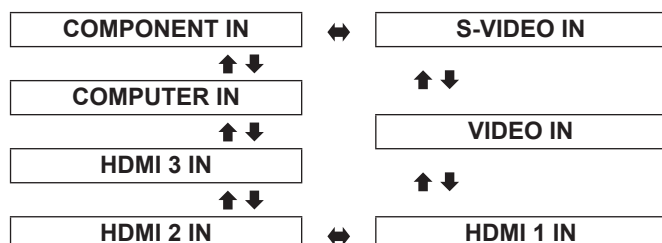

COMPONENT IN	COMPONENT (YPbPr) signals from the equipment connected to COMPONENT IN .
S-VIDEO IN	S-VIDEO signal from the equipment connected to S-VIDEO IN .
VIDEO IN	VIDEO signal from the equipment connected to VIDEO IN .
HDMI 1 IN	HDMI signal from the equipment connected to HDMI IN 1/HDMI IN 2/HDMI IN 3 .
HDMI 2 IN	
HDMI 3 IN	
COMPUTER IN	RGB/YPbPr signal from the equipment connected to COMPUTER IN .

NOTE:

- If you select an unplugged input method, the guidance will blink on and off.
- See "List of compatible signals" in "Technical Information" of the operating instructions.
- See "Connections" on page 8.

Using the assigned function as a shortcut

FUNCTION

You can access the assigned function in **FUNCTION BUTTON** menu as a shortcut. See "FUNCTION BUTTON" on page 38.

COLOUR MANAGEMENT	page 27
GAMMA ADJUSTMENT	page 23
SPLIT ADJUST	page 22
WAVEFORM AUTO ADJUST	page 21
FRAME CREATION	page 26
NORMAL	page 20
DYNAMIC	
COLOUR1	
COLOUR2	
CINEMA1	
CINEMA2	
CINEMA3	
TEST PATTERN	page 41

OPERATE OTHER DEVICE	Booklet
ASPECT	page 32
AUTO SETUP	page 34
CONTRAST	page 20
BRIGHTNESS	
BLANK	page 38
HDMI 1 IN	page 15
HDMI 2 IN	
HDMI 3 IN	
COMPUTER IN	
COMPONENT IN	
S-VIDEO IN	
VIDEO IN	


Menu Navigation

Navigating through the MENU

Displaying the main menu



Press the **MENU** button to display the main menu and the operating guidance.

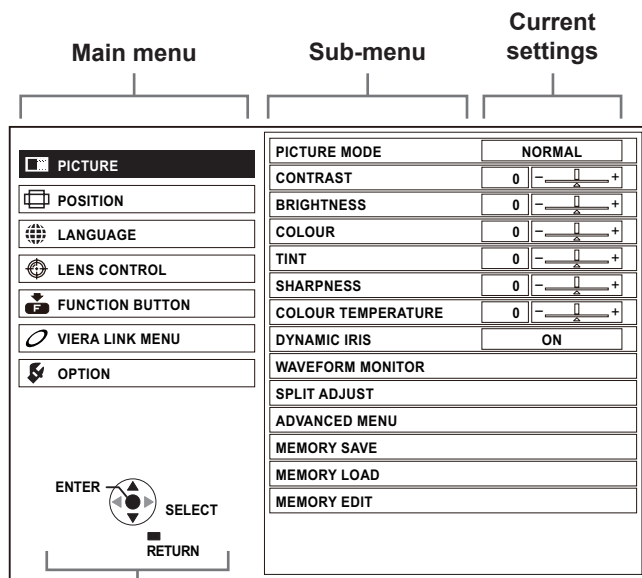


Operating guidance

Contains the required buttons to adjust the settings.

Adjusting with the bar scale items

The triangle mark under the bar indicates factory default setting and the square indicates the current setting.

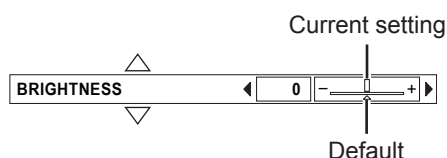


Returning to the previous menu




Press the **MENU** or **RETURN** button to return to the previous menu. Press repeatedly to escape from the menu mode and return to the projection.

Operating procedure

- Press **▲ ▼** to scroll to the required main menu item and press the **ENTER** button to select.
 - The selected item is highlighted in orange and the sub-menu is displayed on the right.
 - See "Menu list" on page 17.

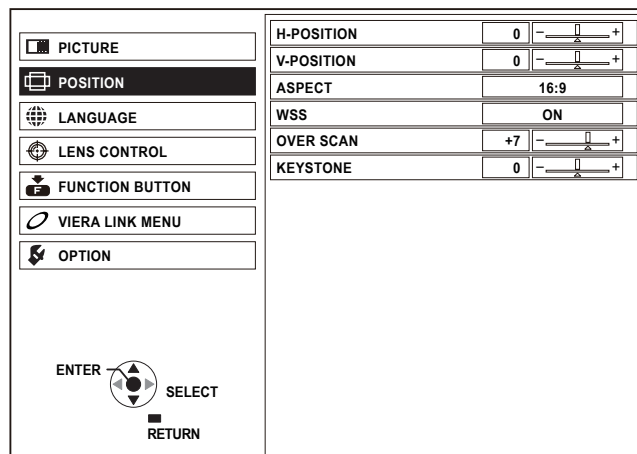

- Press **▲ ▼** to scroll to the required sub-menu item and press **◀ ▶** or the **ENTER** button to adjust.
 - The selected item is called up and the other menu items disappear from the screen. The Called up item will disappear after 5 seconds without any operation and return to the menu mode.
 - If there is a lower level to the sub-menu item, the next level will be displayed.

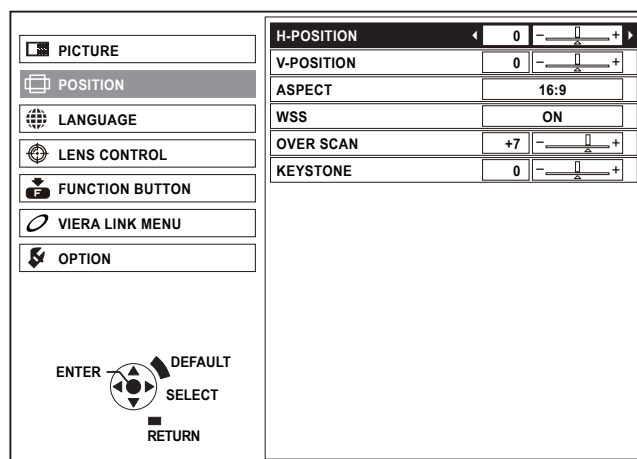

- Press **◀ ▶** to adjust or set the selected item.
 - For items using a bar scale, the current settings are displayed on the left of the bar scale.
 - You can cycle through the options of an item by pressing **▲ ▼**.



- Press the **MENU** or **RETURN** button to return to the previous menu.

Menu list

The menu options are structured and categorised. You can navigate through the menu with ▲ ▼ ◀ ▶ buttons.

NOTE:

- The underlined items are factory default settings.
- Some default settings vary by the selected input signal.
- Sub-menu items vary according to the selected input signal.
- Some settings are adjustable without any signals.



PICTURE

- It is possible to adjust the picture quality.

PICTURE MODE	page 20
NORMAL	DYNAMIC
COLOUR1	COLOUR2
CINEMA1	CINEMA2
CINEMA3	
CONTRAST	page 20
(Default: 0)	
BRIGHTNESS	page 20
(Default: 0)	
COLOUR	page 20
(Default: 0)	
TINT	page 20
(Default: 0)	
SHARPNESS	page 20
(Default: 0)	
COLOUR TEMPERATURE	page 21
(Default: 0)	
DYNAMIC IRIS	page 21
<u>ON</u>	OFF
WAVEFORM MONITOR	page 21
<u>OFF</u>	
FULL SCAN(Y)	FULL SCAN(R)
FULL SCAN(G)	FULL SCAN(B)
SINGLE LINE SCAN(Y)	
SINGLE LINE SCAN(R)	
SINGLE LINE SCAN(G)	
SINGLE LINE SCAN(B)	
MONITOR POSITION	
<u>UPPER LEFT</u>	UPPER CENTRE
UPPER RIGHT	LOWER LEFT
LOWER CENTRE	LOWER RIGHT
AUTO ADJUST	
START AUTO ADJUST	
BLACK LEVEL ADJUST	
WHITE LEVEL ADJUST	
RGB ADJUST (BLACK)	
RGB ADJUST (WHITE)	
SPLIT ADJUST	page 22
AREA SELECT	
SPLIT ADJUST MODE	
NORMAL	REVERSE



ADVANCED MENU	page 23
GAMMA ADJUSTMENT	
SIMPLE	ADVANCED
CONTRAST R	(Default: 0)
CONTRAST G	(Default: 0)
CONTRAST B	(Default: 0)
BRIGHTNESS R	(Default: 0)
BRIGHTNESS G	(Default: 0)
BRIGHTNESS B	(Default: 0)
NR	(Default: 0)
MPEG NR	(Default: 0)
FRAME CREATION	
OFF	<u>MODE1</u>
MODE2	MODE3
COLOUR MANAGEMENT	
PROFILE	ADJUSTMENT MODE
START ADJUSTMENT	LOG
PROFILE SAVE	PROFILE DELETE
PROFILE NAME CHANGE	
x.v.Colour	
<u>ON</u>	OFF
DETAIL CLARITY	(Default: 3)
CINEMA REALITY	
<u>ON</u>	OFF
TV-SYSTEM	
<u>AUTO</u>	
NTSC	NTSC 4.43
PAL	PAL-M
PAL-N	SECAM
RGB/YPbPr	
<u>AUTO</u>	RGB
	YPbPr
MEMORY SAVE	page 30
MEMORY 1 - 16	
MEMORY LOAD	page 31
MEMORY 1 - 16	
MEMORY EDIT	page 31
MEMORY DELETE	
MEMORY 1 - 16	ALL DELETE
MEMORY NAME CHANGE	
MEMORY 1 - 16	
SIGNAL MODE	page 31

Menu Navigation

POSITION

- It is possible to adjust the image size and position.

H-POSITION (Default: 0)	page 32
V-POSITION (Default: 0)	page 32
DOT CLOCK (Default: 0)	page 32
CLOCK PHASE (Default: 0)	page 32
ASPECT	page 32
4:3 16:9 s16:9 14:9	
ZOOM ZOOM1 ZOOM2 JUST	
AUTO H-FIT V-FIT	
WSS ON OFF	page 34
OVER SCAN	page 34
KEYSTONE (Default: 0)	page 34
AUTO SETUP	page 34

LANGUAGE

- It is possible to change the display language.

DEUTSCH	POLSKI
FRANÇAIS	ČEŠTINA
ESPAÑOL	MAGYAR
ITALIANO	РУССКИЙ
PORTUGUÊS	ไทย
SVENSKA	한국어
NORSK	ENGLISH
DANSK	中文
	日本語

LENS CONTROL

- It is possible to adjust the lens position.

ZOOM/FOCUS	page 35
LENS MEMORY LOAD LENS MEMORY 1 - 6	page 35
LENS MEMORY SAVE LENS MEMORY 1 - 6	page 35
LENS MEMORY EDIT LENS MEMORY DELETE LENS MEMORY 1 - 6 ALL DELETE LENS MEMORY NAME CHANGE LENS MEMORY 1 - 6	page 36
AUTO SWITCHING	page 36
2.35:1 IMAGE DETECTION OFF LENS MEMORY 1 - 6	
16:9 IMAGE DETECTION OFF LENS MEMORY 1 - 6	

H-AREA POSITION (Default: 0)	page 37
V-AREA POSITION (Default: 0)	page 37
LEFT MASKING AREA (Default: 0)	page 37
RIGHT MASKING AREA (Default: 0)	page 37
UPPER MASKING AREA (Default: 0)	page 37
LOWER MASKING AREA (Default: 0)	page 37

FUNCTION BUTTON

- It is possible to assign a useful function to the **FUNCTION** button.

COLOUR MANAGEMENT	
GAMMA ADJUSTMENT	
SPLIT ADJUST	
WAVEFORM AUTO ADJUST	
FRAME CREATION	
NORMAL	DYNAMIC
COLOUR1	COLOUR2
CINEMA1	CINEMA2
CINEMA3	TEST PATTERN
OPERATE OTHER DEVICE	
ASPECT	AUTO SETUP
CONTRAST	BRIGHTNESS
BLANK	HDMI 1 IN
HDMI 2 IN	HDMI 3 IN
COMPUTER IN	COMPONENT IN
S-VIDEO IN	VIDEO IN

VIERA LINK MENU

- It is possible to link with the connected equipment.

VIERA LINK CONTROL	Booklet
RECORDER 1 - 3	
PLAYER 1 - 3	
HOME CINEMA 1 - 3	
VIDEO CAMERA 1 - 3	
LUMIX 1 - 3	
OTHER 1 - 4	
HOME CINEMA VOLUME	Booklet
HOME CINEMA MUTE	Booklet
OPERATE OTHER DEVICE	Booklet



OPTION

- It is possible to change the option settings.


INPUT GUIDE		page 39
<u>DETAILED</u>	OFF	
<u>SIMPLE</u>		
OSD DESIGN		page 39
<u>TYPE1</u>	TYPE2	
<u>TYPE3</u>		
OSD POSITION		page 39
<u>CENTRE</u>	LOWER LEFT	
LOWER CENTRE	LOWER RIGHT	
UPPER LEFT	UPPER CENTRE	
UPPER RIGHT		
BACK COLOUR		page 39
<u>BLUE</u>	BLACK	
STARTUP LOGO		page 39
<u>ON</u>	OFF	
AUTO SEARCH		page 39
<u>ON</u>	OFF	
HDMI SIGNAL LEVEL		page 39
<u>NORMAL</u>	EXPAND	
FRAME RESPONSE		page 39
<u>NORMAL</u>	FAST	
INSTALLATION		page 39
<u>FRONT/DESK</u>	FRONT/CEILING	
REAR/DESK	REAR/CEILING	
TRIGGER 1/2 SETTING		page 40
<u>OFF</u>		
OUTPUT		
POWER ON		
SELECT LENS MEMORY 1 - 6		
BLANK		
SELECT 4:3 ASPECT		
SELECT 16:9 ASPECT		
SELECT S16:9 ASPECT		
SELECT JUST ASPECT		
SELECT ZOOM ASPECT		
SELECT H-FIT ASPECT		
SELECT V-FIT ASPECT		
RS-232C COMMAND LINK		




DELAY TIME			
<u>0 SEC.</u>	2 SEC.	4 SEC.	6 SEC.
8 SEC.	10 SEC.	20 SEC.	30 SEC.
INPUT			
POWER ON/OFF	BLANK		
SLEEP			page 41
<u>OFF</u>	60 MIN.	90 MIN.	120 MIN.
150 MIN.	180 MIN.	210 MIN.	240 MIN.
HIGH ALTITUDE MODE			page 41
<u>OFF</u>	ON		
LAMP POWER			page 41
<u>NORMAL</u>	ECO-MODE		
VIERA LINK SETTINGS			page 41
VIERA LINK			
<u>ON</u>	OFF		
POWER ON LINK			
<u>OFF</u>	ON		
POWER OFF LINK			
<u>ON</u>	OFF		
STANDBY POWER SAVE			
<u>OFF</u>	ON		
INTELLIGENT AUTO STANDBY			
<u>OFF</u>	ON (WITH REMINDER)		
ON (NO REMINDER)			
VERSION			
TEST PATTERN			page 41
LAMP RUNTIME			page 41

PICTURE menu

Remote control

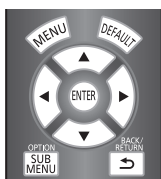


Control panel

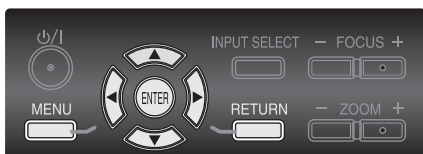

- See "Navigating through the MENU" on page 16.
- See "Menu list" on page 17.

PICTURE MODE

Depending on the projection environment, you can use these preset parameter settings to optimise image projection. Press ◀ ▶ to cycle through the options.

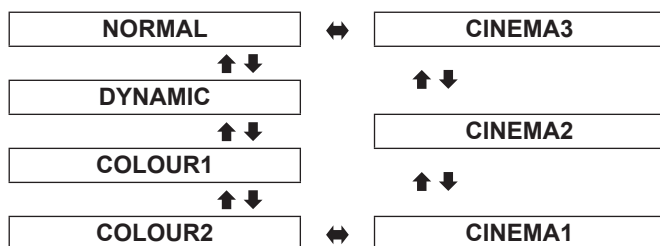

NORMAL	Setting for a general image, such as sports programme or TV games.
DYNAMIC	Bright and sharp setting.
COLOUR1	Setting for HDTV standard in ITU-R BT. 709 and colour temperature 6 500 K at the default setting of the PICTURE menu items.
COLOUR2	Setting for DCDM standard (SMPTE431-2) and colour temperature 6 300 K at the default setting of the PICTURE menu items.
CINEMA1	Setting tuned by top Hollywood colourists.
CINEMA2	Deeper and more rich colour setting
CINEMA3	Vivid and crisp colour setting.

NOTE:

- It may take a while until the selected mode is stabilised.

CONTRAST

You can adjust the contrast of the projected image. Adjust the **BRIGHTNESS** in advance if necessary.

Lower



Higher

- Setting range: -64 to +64

BRIGHTNESS

You can adjust the brightness of the projected image.

Darker



Brighter

- Setting range: -32 to +32

COLOUR

You can adjust the colour saturation of the projected image.

Lighter



Darker

- Setting range: -32 to +32
- When **RGB/YPbPr** signal is connected, only available with the following signals.
 1 125 (1 080)/60i 1 125 (1 080)/50i
 1 125 (1 080)/60p 1 125 (1 080)/50i

TINT

You can adjust the skin tone in the projected image.

More
reddish



More
greenish

- Setting range: -32 to +32
- When **COMPUTER** signal is connected, only available with the following signals.
 1 125 (1 080)/60i 1 125 (1 080)/50i
 1 125 (1 080)/60p 1 125 (1 080)/50i

SHARPNESS

You can adjust the sharpness of the projected image.

Less
sharp



More
sharp

- Setting range will vary according to the selected input signal.

COLOUR TEMPERATURE

You can adjust the white balance of the projected image.

Less
bluish



More
bluish

- Setting range: -6 to +6

DYNAMIC IRIS

You can switch automatic adjustment of the lamp and the lens iris on/off.

- **ON:** Automatic adjustment
- **OFF:** No adjustment

WAVEFORM MONITOR

You can monitor whether or not the luminance level of the input signal is in the recommended range by displaying it in the waveform monitor. If the waveform is not in the recommended range, adjust it for the best quality. See "Adjusting the signal condition with a waveform" on page 14.

• OFF	
FULL SCAN(Y)	
FULL SCAN(R)	
FULL SCAN(G)	
FULL SCAN(B)	
SINGLE LINE SCAN(Y)	
SINGLE LINE SCAN(R)	
SINGLE LINE SCAN(G)	
SINGLE LINE SCAN(B)	
MONITOR POSITION	UPPER LEFT
AUTO ADJUST	

1. Press ▲ ▼ to move to the required waveform style.
2. Press the **ENTER** button to select.
 - The **WAVEFORM MONITOR** will be displayed.

NOTE:

- When the **WAVEFORM MONITOR** is set to **OFF**, the **AUTO ADJUST** is not displayed.
- The waveform of the **WAVEFORM MONITOR** will not be displayed correctly with a noisy equipment or source.
- The **WAVEFORM MONITOR** adjusts the signal level based on the reference signal which consists of 0 % and 100 %. The over scanned reference signal which runs off the edge of the screen, below 0 % or over 100 % signal level will not be adjusted correctly.

MONITOR POSITION

When the **FULL SCAN** is selected, press ▲ ▼ ◀ ▶ to adjust the position of the monitor.

- See "Adjusting the signal condition with a waveform" on page 14.

AUTO ADJUST



You can switch on/off the automatic adjustment system in each item.

BLACK LEVEL ADJUST Adjust the black level of luminance (Y) to 0 %.	ON
WHITE LEVEL ADJUST Adjust the white level of luminance (Y) to 100 %.	ON
RGB ADJUST (BLACK) Adjust the black level of colours (R/G/B) to 0 %.	OFF
RGB ADJUST (WHITE) Adjust the white level of colours (R/G/B) to 100 %.	OFF

1. Press ▲ ▼ and select the required item.
2. Press ◀ ▶ and switch on/off.
3. Press ▲ ▼ and select **START AUTO ADJUST** and press the **ENTER** button.
 - The confirmation screen will be displayed.
4. Press ◀ ▶ and select **OK**.
5. Press the **ENTER** button.

Adjustment example

Project a commercial test signal for picture adjustment on the screen and press the **WAVEFORM MONITOR** button.

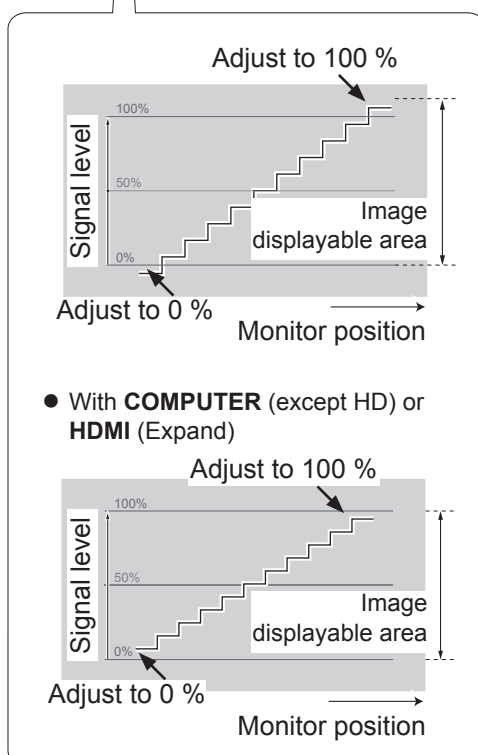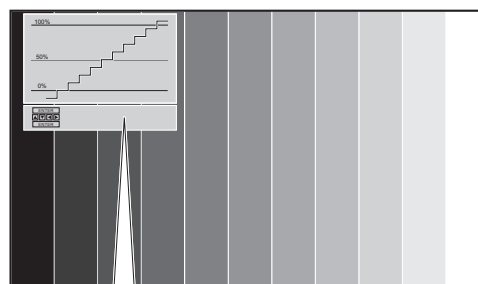

PICTURE menu

● Adjusting with luminance options

1. Press the **ENTER** button several times to display **FULL SCAN(Y)/SINGLE LINE SCAN(Y)**.
 - In **SINGLE LINE SCAN** mode, select the required adjusting point by pressing **▲ ▼**.
2. Press the **PICTURE ADJUSTMENT** button and display the **BRIGHTNESS** by pressing **▲ ▼**.
 - When **ADVANCED MENU** is displayed, press the button again to switch to the **PICTURE** menu.
3. Adjust by pressing **◀ ▶**.
 - Adjust the bottom line of the waveform to 0 % (0 or 7.5 IRE).
 - Setting range: -32 to +32
4. Press **▲ ▼** to display the **CONTRAST**.
5. Adjust by pressing **◀ ▶**.
 - Adjust the up line of the waveform to 100 % (100 IRE).
 - Setting range: -64 to +64

FULL SCAN(Y)/SINGLE LINE SCAN(Y)

BRIGHTNESS	Adjust the bottom line of the waveform to 0 % (0 or 7.5 IRE)
CONTRAST	Adjust the top line of the waveform to 100 % (100 IRE)

● Adjusting with RGB options

1. Press the **ENTER** button several times to display the required R/G/B waveform option.
 - In **SINGLE LINE SCAN** mode, select the required adjusting point by pressing **▲ ▼**.
2. Press the **PICTURE ADJUSTMENT** button and display the **BRIGHTNESS R/BRIGHTNESS G/BRIGHTNESS B** by pressing **▲ ▼**.
 - When **PICTURE** menu is displayed, press the button again to switch to the **ADVANCED MENU**.
3. Adjust by pressing **◀ ▶**.
 - Adjust the bottom line of the waveform to 0 % (0 or 7.5 IRE).
 - Setting range: -16 to +16
4. Press **▲ ▼** to display the **CONTRAST R/CONTRAST G/CONTRAST B**.
5. Adjust by pressing **◀ ▶**.
 - Adjust the up line of the waveform to 100 % (100 IRE).
 - Setting range: -32 to +32

FULL SCAN(R)/SINGLE LINE SCAN(R)

BRIGHTNESS R	Adjust the bottom line of the waveform to 0 % (0 or 7.5 IRE)
CONTRAST R	Adjust the top line of the waveform to 100 % (100 IRE)

FULL SCAN(G)/SINGLE LINE SCAN(G)

BRIGHTNESS G	Adjust the bottom line of the waveform to 0 % (0 or 7.5 IRE)
CONTRAST G	Adjust the top line of the waveform to 100 % (100 IRE)

FULL SCAN(B)/SINGLE LINE SCAN(B)

BRIGHTNESS B	Adjust the bottom line of the waveform to 0 % (0 or 7.5 IRE)
CONTRAST B	Adjust the top line of the waveform to 100 % (100 IRE)


SPLIT ADJUST

You can perform image adjustment for some **PICTURE** menu items while displaying a certain area of the frozen image in a split window.


● SPLIT ADJUST MODE

Select the required split style from **NORMAL** and **REVERSE** in the **SPLIT ADJUST MODE** menu.

● NORMAL

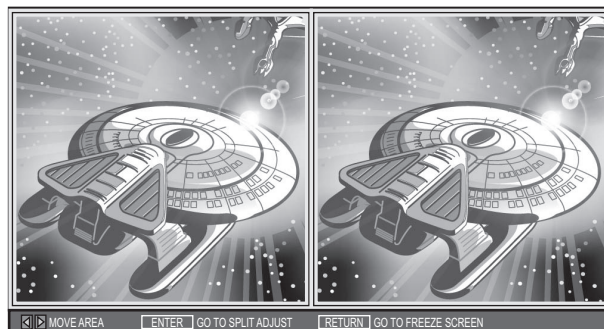


● REVERSE

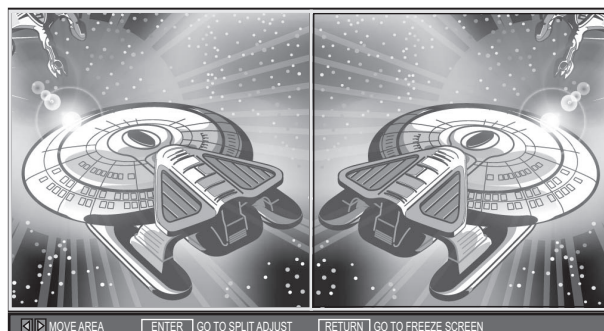


● Adjusting the image in a split window

1. Select **AREA SELECT** and press the **ENTER** button.
 - The image will be frozen and the area cursor will be displayed.

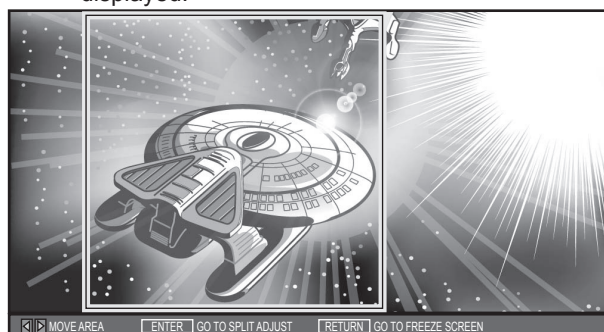

2. Press **◀ ▶** to move the area cursor to select the area of interest and press the **ENTER** button.
 - The selected frozen image will be displayed in a split window.

3. Press the **MENU** button to display the **PICTURE** menu on the right.

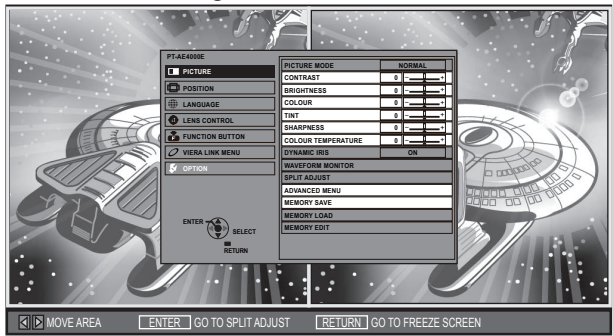

4. Adjust the required **PICTURE** menu items.
- Only the highlighted menu items are adjustable.
 - Sub-menu items vary according to the selected input signal. See "Menu list" on page 17.
5. Press the **MENU** or **RETURN** button several times to escape from the menu.
6. Press the **ENTER** button.
- The confirmation screen will be displayed. Select **YES** to finish the adjustment.
7. Press the **ENTER** button.
- Press the **ENTER** button again to return to the **AREA SELECT**.
 - Press the **RETURN** button to escape from the **SPLIT ADJUST** mode.

ADVANCED MENU

You can perform more detailed image adjustment manually.


GAMMA

You can make detailed adjustments to the light intensity of each input signal level by using the **ADVANCED** mode or using the **SIMPLE** mode to adjust at 3 levels (high, mid, low).

NOTE:


- You can only adjust the **GAMMA** settings through either the **ADVANCED** or **SIMPLE** mode. Both settings cannot be used at the same time.

Select **GAMMA ADJUSTMENT** in **ADVANCED MENU**, and press **◀ ▶** or the **ENTER** button.

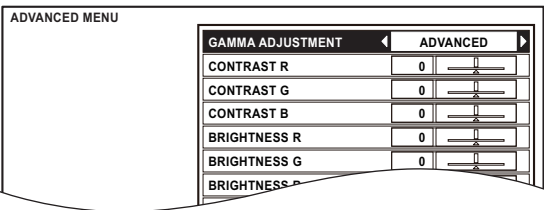

Setting the GAMMA with the ADVANCED mode


1. The **GAMMA ADJUSTMENT** menu will be displayed and press **◀ ▶** to select **ADVANCED**.

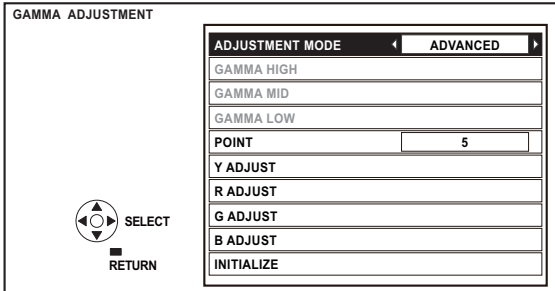

2. To open the **Y ADJUST** menu, press **▲ ▼** to select **Y ADJUST** and then press the **ENTER** button.

In the graph below

- Maximum 9 points are adjustable.
- The point counts from lower input signal, 1 to 9.

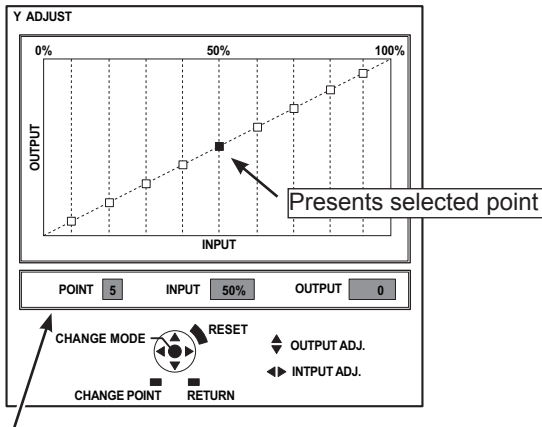

Information about the present selected point.

The factory default setting:

POINT [5] INPUT [50 %] OUTPUT [0]

POINT	Display the present selected point number. Your selected point is indicated in yellow on the graph. (The factory default setting: point 5)
INPUT	Display the input level of the present selected point. Setting range: from 1 to 99 % in increments of 1 % (The factory default setting: 10, 20, 30, 40, 50, 60, 70, 80, 90 %)
OUTPUT	Display the output level of the present selected point. Adjustable range depends on the input level. (The factory default setting: 0)

PICTURE menu



3. Adjusting the linear intensity.

1) Changing the selected point.

(Using the remote control)

- To select another point, press the **SUB MENU** button. Selected point will be moved each time the **SUB MENU** button is pressed.



Ex. 5 → 6 → ... 9 → 1 → ...

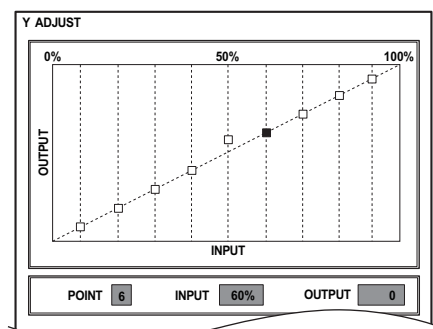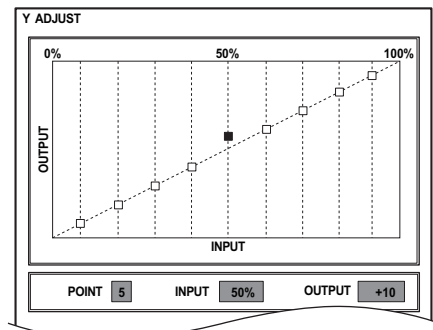

(Using the control panel/remote control)

- You can also change the **POINT** from the **GAMMA ADJUSTMENT** menu directly. Press the **RETURN** button to display the **GAMMA ADJUSTMENT** menu if you are in the **Y/R/G/B ADJUST** menu. Use **▲ ▼** to select **POINT** and **◀ ▶** to change the point from 1 to 9.

Ex. Press **▶** to change the point from 5 to 6.

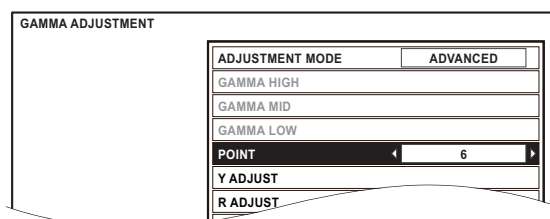
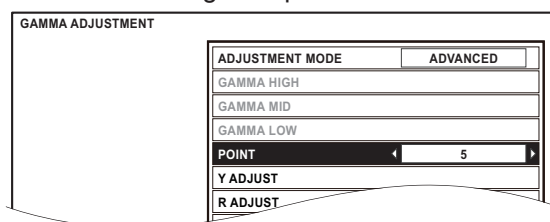


2) Adjusting the **INPUT** level.

To adjust the **INPUT** level from the present setting, press **◀ ▶** continuously until it reaches your desired level.

- It can move from left to right but cannot be set beyond the adjacent points.
- Only available to adjust the **INPUT** level in the **Y ADJUST** menu and not other menus (**R/G/B ADJUST**).

Ex. Press **◀** in the **Y ADJUST** menu and move the selected point leftward.

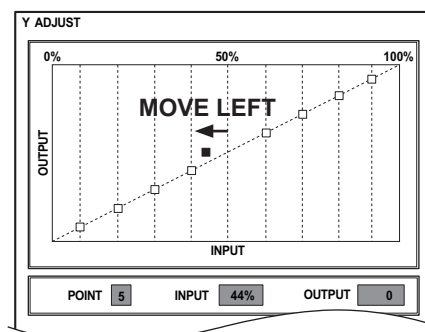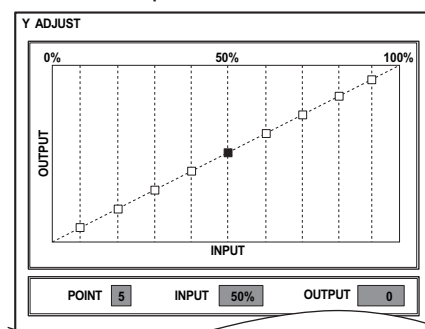


3) Adjusting the **OUTPUT** level.

To adjust the **OUTPUT** level from the present setting, press ▲ ▼ continuously until it reaches to your desired level.


- It can move up and down but cannot be set beyond the adjacent points.

Ex. Press ▲ in the **Y ADJUST** menu and move the selected point upward.


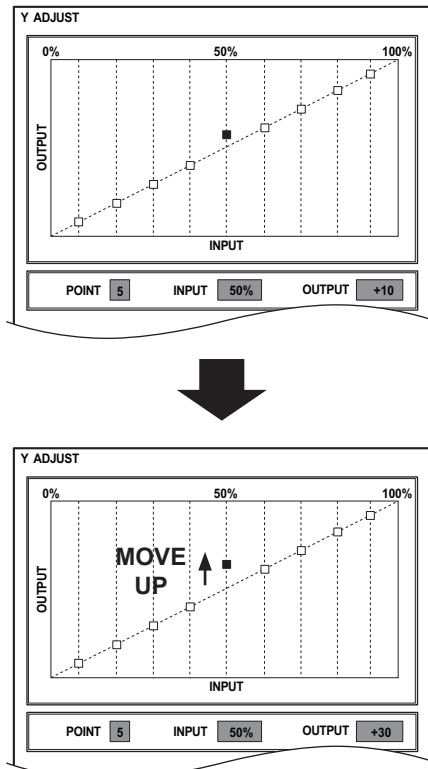


4) Changing the adjustment by different colour types.

 - To switch to a different colour **ADJUST** menu, press the **ENTER** button continuously until it reaches your desired colour **ADJUST** menu.



- You can also switch each different colour **ADJUST** menu through the **GAMMA ADJUSTMENT** menu. Select your required colour **ADJUST** (Y ADJUST, R ADJUST, G ADJUST, B ADJUST) with ▲ ▼ in the **GAMMA ADJUSTMENT** menu and press the **ENTER** button.

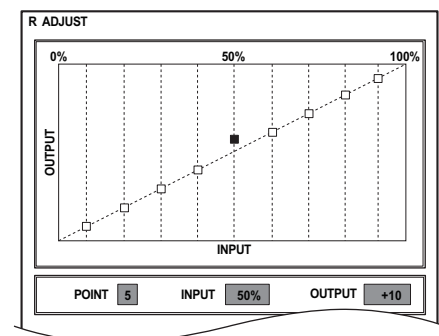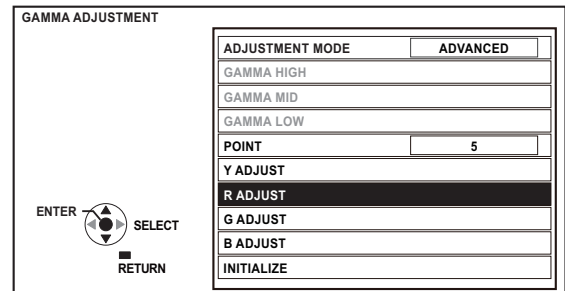

5) Setting the **OUTPUT** levels back to the default setting.


To set the **OUTPUT** level on the selected point back to the default setting “0”, press the **DEFAULT** button on the remote control.

NOTE:


- Individual **INPUT** levels cannot be set back to their default settings by pressing the **DEFAULT** button. Please press ◀ ▶ to move back themselves if needed.
- In the **Y ADJUST** menu, if you press the **DEFAULT** button, all Y/R/G/B output settings will go back to the default setting “0”.
- Adjustable range depends on the input signal.

PICTURE menu

- Initialize the **GAMMA** settings in the **ADVANCED** mode.
- Press **▲ ▼** to select **INITIALIZE** in the **GAMMA ADJUSTMENT** menu, and press the **ENTER** button.

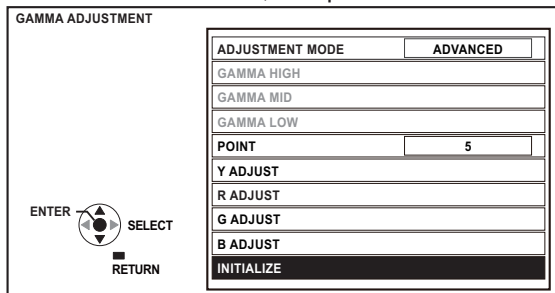

- The confirmation screen will be displayed for the **GAMMA** initialization.

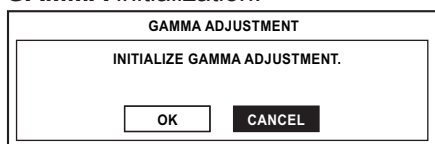


- Press **◀ ▶** to select **OK** and press the **ENTER** button.
 - Your **GAMMA** settings in the **ADVANCED** mode will go back to the factory default setting.

NOTE:

- It is not available to initialize in the **SIMPLE** mode.

● Setting the GAMMA with the SIMPLE mode

- In the **GAMMA ADJUSTMENT** menu, press **◀ ▶** to select **SIMPLE** in **ADJUSTMENT MODE**.

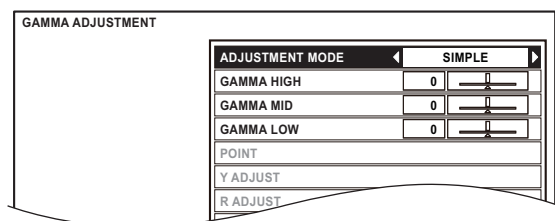


- You can adjust linear intensity at 3 levels (high, mid, low). Press **▲ ▼** to select your required **GAMMA** levels.

Levels	Default setting
GAMMA HIGH	0
GAMMA MID	0
GAMMA LOW	0

- Setting range: -8 to +8

Press **◀ ▶** to increase/decrease 1 point.

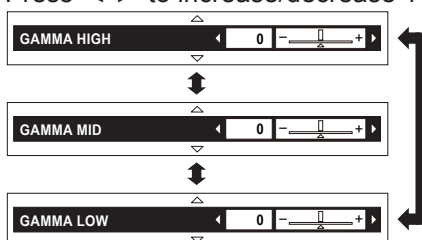

■ CONTRAST

You can adjust the amount of contrast of individual RGB colours. Press **◀ ▶** to increase/decrease 1 point.

RGB	Default setting
CONTRAST R	0
CONTRAST G	0
CONTRAST B	0

- Setting range: -32 to +32

■ BRIGHTNESS

You can adjust the brightness of individual RGB colours. Press **◀ ▶** to increase/decrease 1 point.

RGB	Default setting
BRIGHTNESS R	0
BRIGHTNESS G	0
BRIGHTNESS B	0

- Setting range: -16 to +16

■ NR (Noise Reduction)

You can adjust the automatic noise reduction system level. Press **◀ ▶** to change the level.

- Setting range: 0 to +3

■ MPEG NR

You can adjust the automatic noise reduction system level for MPEG format images. The system minimise block noise and mosquito noise to eliminate jagged edges, and provides an overall smoother image. Press **◀ ▶** to change the level.

- Setting range: 0 to +3

NOTE:

- MPEG NR** system is not available with **COMPUTER/HDMI** (VGA60) signals.

■ FRAME CREATION

You can activate the rendering system for fast motion frames with fewer afterimage. Press **◀ ▶** to select the required option.

- OFF** Deactivate
- MODE1** Setting for a cinema image
- MODE2** Setting for a moving image
- MODE3** Setting for a fast moving image

NOTE:


- With some of the images, it might be difficult to see a difference in result.
- The image might look delayed with the **MODE2/ MODE3** setting. When the result does not meet your requirement, select **MODE1** or deactivate the system.

COLOUR MANAGEMENT

You can adjust a selected colour individually by using **CURSOR** or adjust the six colour components (Red, Green, Blue, Cyan, Magenta, Yellow) by using **RGBCMY**.

To open the **COLOUR MANAGEMENT** menu, select from the **ADVANCED MENU** in the **PICTURE** menu, or press the **FUNCTION** button as a shortcut.

- In the factory default setting, **COLOUR MANAGEMENT** is set as a default for the **FUNCTION** button.

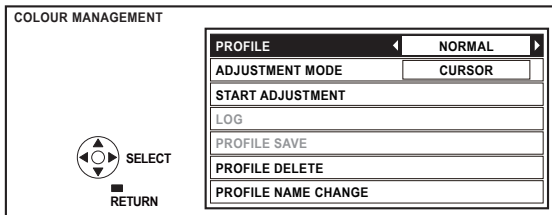


Create a new profile


Adjusting the selected colour with the CURSOR mode.

Select a colour and adjust **COLOUR**, **TINT** and **BRIGHTNESS**.


- Press **◀ ▶** to select **CURSOR** in **ADJUSTMENT MODE**.
- Press **▲ ▼** to select **START ADJUSTMENT** and press the **ENTER** button.
 - The projected image is captured, and the target cursor is displayed.
 - When the **LOG** is fully stored, the target cursor will not be displayed.

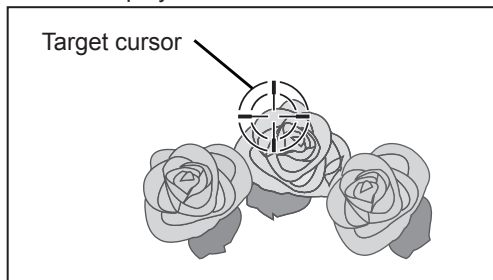

- Move the cursor with **▲ ▼ ▲ ▶** to the required place to select a colour and press the **ENTER** button.
 - The colour at the centre of the target cursor is sampled and the sample box is displayed in the left of the cursor. The menu items are displayed on the screen.
 - You may fail to adjust when the very edge point of the projection area is selected as sample.
 - You can create a profile only when **ADJUSTMENT MODE** is set to either **CURSOR** or **RGBCMY**.

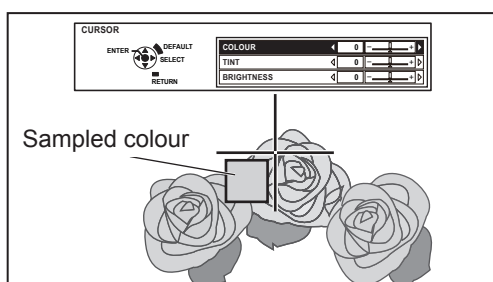

- Press **▲ ▼** to select a menu item and the **◀ ▶** to adjust each item level.
 - The result box is displayed on the right of the cursor and shows the adjusted colour.

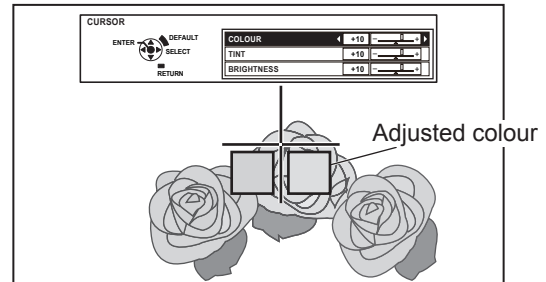


COLOUR	Adjust the vividness of the colour. Setting range: -30 to +30
TINT	Adjust the colour tone. Setting range: -30 to +30
BRIGHTNESS	Adjust the brightness of the colour. Setting range: -20 to +20

- Press the **ENTER** button to store the adjusted result.
 - "**PROCESSING**" is displayed for a few seconds and the result is stored in **LOG**.
 - You can store up to 8 logs under **LOG** for each **PICTURE MODE** setting.
- Press the **MENU** or **RETURN** button to return to the previous menu.
 - Repeat the steps above to store more adjustment.
 - When the **LOG** is fully stored, the screen will be switched automatically to the **COLOUR MANAGEMENT** menu.

Adjusting the selected colour with the RGBCMY mode.

Select the colour from 6 different colour types (**RED**, **GREEN**, **BLUE**, **CYAN**, **MAGENTA**, **YELLOW**) and adjust **COLOUR**, **TINT** and **BRIGHTNESS**.

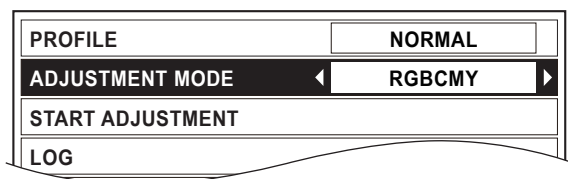


- Press **◀ ▶** to select **RGBCMY** in **ADJUSTMENT MODE**.
- Press **▲ ▼** to select **START ADJUSTMENT** and press the **ENTER** button.

PICTURE menu


- Press **▲ ▼** to select your desired colour and press the **ENTER** button.

RED
GREEN
BLUE
CYAN
MAGENTA
YELLOW

- The sample box and the menu items are displayed on the screen.

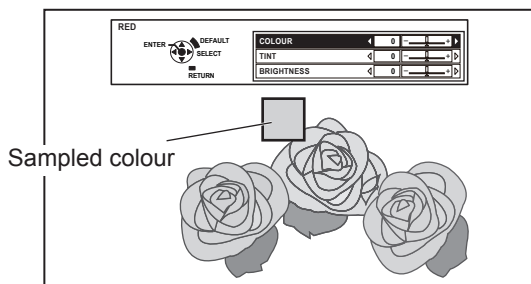

- Press **▲ ▼** to select a menu item and the **◀ ▶** to adjust each item level.
 - The result box is displayed on the right of the sample box and shows the adjusted colour.
 - Both the sampled colour and adjusted colour indicated in the **RGBCMY** mode are shown only as a guide.

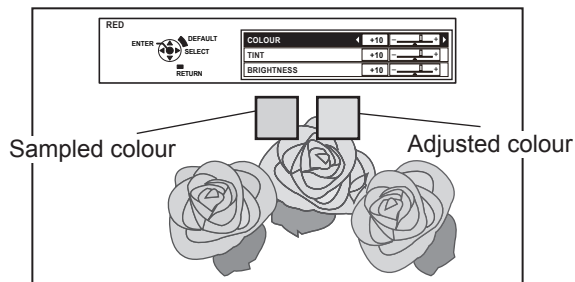

COLOUR	Adjust the vividness of the colour. Setting range: -30 to +30
TINT	Adjust the colour tone. Setting range: -30 to +30
BRIGHTNESS	Adjust the brightness of the colour. Setting range: -20 to +20

- Press the **ENTER** button to store the adjusted result.
 - "**PROCESSING**" is displayed for a few seconds and the result is stored in **LOG**.
 - You can store up to 6 different colour adjusted images under **LOG** for each **PICTURE MODE** setting.
- Press the **MENU** or **RETURN** button to return to the previous menu.
 - Repeat the steps above to store more adjustments.

- Managing the stored logs which are created through the CURSOR mode.**

You can edit or delete the stored logs of the selected **PICTURE MODE**.

- Press **▲ ▼** to select **LOG** and press the **ENTER** button.

- The **LOG** menu is displayed.

ADJUSTMENT MODE : CURSOR			
PICTURE MODE : NORMAL			
	COLOUR	TINT	BRIGHTNESS
POINT1	+10	+10	+10
POINT2	+10	+10	+10
POINT3	+10	+10	+10
POINT4	+10	+10	+10
POINT5	+10	+10	+10
POINT6	+10	+10	+10
POINT7	+10	+10	+10
POINT8	+10	+10	+10
ALL DELETE			

Sampled colour —  — Adjusted colour

- Press **▲ ▼** to select the required log from 1 - 8 or **ALL DELETE**, and press the **ENTER** button.

- Select **CHANGE** to edit the log.
The **CURSOR** mode is displayed and you can readjust the colour.
- Select **DELETE** to delete the log.
The confirmation screen will be displayed. Select **OK** to delete.
- When you select **ALL DELETE**, the "**DELETE ALL LOG.**" screen is displayed. Select **OK** to delete all logs. The **PROFILE** setting will be set to **NORMAL**.

- Managing the stored logs which are created through the RGBCMY mode.**

ADJUSTMENT MODE : RGBCMY			
PICTURE MODE : NORMAL			
	COLOUR	TINT	BRIGHTNESS
RED	+10	+10	+10
GREEN	+10	+10	+10
BLUE	+10	+10	+10
CYAN	+10	+10	+10
MAGENTA	+10	+10	+10
YELLOW	+10	+10	+10
ALL DELETE			

Sampled colour —  — Adjusted colour

 
- Press **▲ ▼** to select **LOG** and press the **ENTER** button.
 - The **LOG** menu is displayed.
- Select the required log from 6 different colours (**R, G, B, C, M, Y**) or **ALL DELETE**, and press the **ENTER** button.
 - Select **CHANGE** to edit the log.
The **RGBCMY** mode is displayed and you can readjust the colour.
 - Select **DELETE** to delete the log.
The confirmation screen will be displayed. Select **OK** to delete.
 - When you select **ALL DELETE**, the "**DELETE ALL LOG.**" screen is displayed. Select **OK** to delete all logs. The **PROFILE** setting will be set to **NORMAL**.

● Saving a log setting as a profile

Return to the **COLOUR MANAGEMENT** menu and save the stored log as a profile. Make sure that the **PICTURE MODE** is not switched.


1. Select the **PROFILE SAVE** menu and press the **ENTER** button.

- The **PROFILE SAVE** menu is displayed. You can save the profile as **USER1**, **USER2** and **USER3**.



- Indicated with ★ is in use, and ☆ is empty.

2. Press the **ENTER** button to save the profile.
 - The confirmation screen is displayed. Press the **ENTER** button again to save.
3. Name the profile.
 - Use ▲ ▼ ◀ ▶ to specify the location of the required character to enter and press the **ENTER** button.
 - You can enter up to 14 characters.

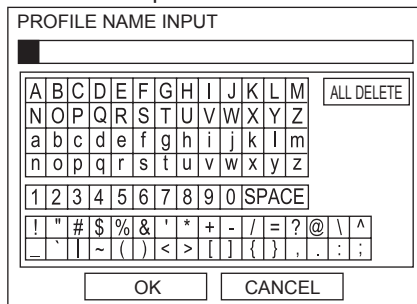

4. Repeat step 3 until you finish the text line.
 - Move cursor to **ALL DELETE** and press the **ENTER** button to delete all the entered text line.
 - Press the **DEFAULT** button to delete the last entered character or indicated with cursor in the text box.
 - To insert a character in the entered text line, move the cursor to the text box to select the required place and press ▼ then perform step 3.
5. Select **OK** and press the **ENTER** button to set the entered text as a name.
 - Press the **ENTER** button without entering any text to keep the default name.

● Deleting the saved profiles

You can delete the profiles from **PROFILE DELETE** menu.

1. Select **PROFILE DELETE** and press the **ENTER** button.
2. Press ▲ ▼ to select the required profile or **PROFILE ALL DELETE** and press the **ENTER** button.
 - The confirmation screen will be displayed and select **OK**.
3. Press the **ENTER** button.

● Changing the profile names

You can change the name of the profiles from the **PROFILE NAME CHANGE** menu.

1. Press ▲ ▼ to select **PROFILE NAME CHANGE** and press the **ENTER** button.
2. Press ▲ ▼ to select the required profile and press the **ENTER** button.
3. Rename the profile.
 - Use ▲ ▼ ◀ ▶ to specify the location of the required character to enter and press the **ENTER** button.
4. Select **OK** and press the **ENTER** button to set the entered text as a name.

● Loading saved profiles

When profiles are loaded under the **PICTURE MODE** setting, you can keep them as you defined until the **PROFILE** is set to **NORMAL**.

1. Select the required **PICTURE MODE** and press the **ENTER** button.
2. Press the **COLOUR MANAGEMENT** button and select the **PROFILE** menu.
 - The profile settings of the selected **PICTURE MODE** will be displayed.
3. Select the required profile and press the **ENTER** button.

NORMAL	Return to the default setting of the PICTURE MODE menu.
USER1	
USER2	Defined profile settings.
USER3	

NOTE:

- In the **CURSOR** mode, you can adjust the colours except white, gray and black.
- In the **CURSOR** mode, if you adjust the exact same colour differently, both will affect each other and you might get unexpected results.
- **COLOUR MANAGEMENT** will be unable to adjust with the setting of **COLOUR1** in **PICTURE MODE**, when HDMI signal is selected.
- If there is another area, which has an exact same or similar colour with your target in the same screen, all colours will be adjusted as well.
- If you switch the input signal before you save the profile, the setting will be cancelled without notice.

■ x.v.Colour

You can switch on/off the automatic adjustment system for signals which comply with International Standard xvYCC.

- **ON:** Active
- **OFF:** Deactive

NOTE:

- **x.v.Colour** adjustment system is available only with HDMI signals in **COLOUR1** of **PICTURE MODE** menu.

PICTURE menu

DETAIL CLARITY

You can adjust the detail clarity system levels.

- Setting range: 0 to +7

CINEMA REALITY

You can switch the automatic image synchroniser on/off for 24 frames a second images, such as movies. Press ◀ ▶ to select the required setting.

- **ON:** Active
- **OFF:** Deactive


NOTE:

- **CINEMA REALITY** is effective only with interlace signals.

TV-SYSTEM

When the video signal is changed, the setting switches automatically.

You can switch the setting manually to match the video data. Press ◀ ▶ to cycle through the options.

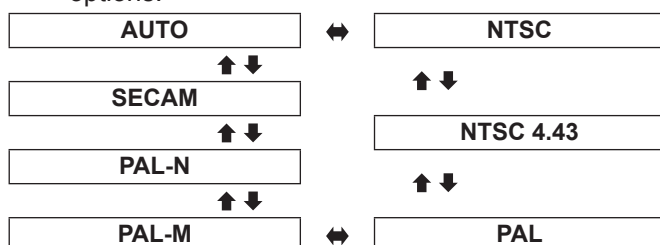

NOTE:

- **AUTO** setting will select from **NTSC/NTSC 4.43/PAL/PAL60/PAL-M/PAL-N/SECAM**.

RGB/YPbPr

The projector will detect the signal from the **COMPUTER** terminals if the signal is **RGB** or **YPbPr**. You can turn off the automatic detecting system and switch between **RGB** and **YPbPr** manually.

- **AUTO:** Automatic detecting system
- **RGB:** Project as **RGB** signal
- **YPbPr:** Project as **YPbPr** signal

NOTE:

- Available with VGA60, 480i, 576i, 480p, 576p, 1 080/60i, 1 080/50i, 720/60p, 720/50p, 1 080/60p, 1 080/50p only.
- When the input signal is not selected correctly with **AUTO** setting, select **RGB** or **YPbPr** manually.

MEMORY SAVE

You can save and name the adjusted **PICTURE** menu settings for instant access from **MEMORY LOAD** menu.

1. Adjust the items in **PICTURE** menu.
2. Select **MEMORY SAVE** and press the **ENTER** button.
3. Select the required memory setting and press the **ENTER** button.
 - The confirmation screen will be displayed. Select **OK** and press the **ENTER** button.
 - Indicated with ★ is in use, and ☆ is empty.
4. Name the memory setting.
 - Use ▲ ▼ ◀ ▶ to specify the location of the required character to enter and press the **ENTER** button.
 - You can enter up to 16 characters.

5. Repeat step 4 until you finish the text line.
 - Move the cursor to **ALL DELETE** and press the **ENTER** button to delete all the entered text line.
 - Press the **DEFAULT** button to delete the last entered character or indicated with cursor in the text box.
 - To insert a character in the entered text line, move the cursor to the text box to select the required place and press ▼ then perform step 4.
6. Select **OK** and press the **ENTER** button to set the entered text as a name.

NOTE:

- If you leave the text box empty and save, the default memory number will stay as a name.

MEMORY LOAD

You can access the saved settings instantly. See "Loading a saved setting" on page 14.

1. Select a setting from **MEMORY 1 - 16**.
 - Undefined settings will not be selectable.
2. Press the **ENTER** button to activate.

NOTE:

- If you have not saved any settings, **MEMORY 1 - 16** will not be displayed.

MEMORY EDIT

You can edit the named memory settings.

● Deleting a memory setting

1. Select **MEMORY DELETE** and press the **ENTER** button.
2. Select the required memory setting and press the **ENTER** button.
 - If you select **ALL DELETE**, you can delete all of the saved memory settings.
3. Select **OK** in the confirmation screen and press the **ENTER** button.

● Changing the name of the memory setting

1. Select **MEMORY NAME CHANGE** and press the **ENTER** button.
2. Select the required memory setting and press the **ENTER** button.
3. Rename the memory setting.
 - Use **▲ ▼ ◀ ▶** to specify the location of the required character to enter and press the **ENTER** button.
 - You can enter up to 16 characters.

MEMORY NAME INPUT

A	B	C	D	E	F	G	H	I	J	K	L	M	ALL DELETE		
N	O	P	Q	R	S	T	U	V	W	X	Y	Z			
a	b	c	d	e	f	g	h	i	j	k	l	m			
n	o	p	q	r	s	t	u	v	w	x	y	z			
1	2	3	4	5	6	7	8	9	0	SPACE					
!	"	#	\$	%	&	'	*	+	-	/	=	?		@	\
_	`		~	(	)	<	>	{	}	.	:	;			

OK CANCEL

4. Repeat step 3 until you finish the text line.
 - Move the cursor to **ALL DELETE** and press the **ENTER** button to delete all the entered text line.
 - Press the **DEFAULT** button to delete the last entered character or indicated with cursor in the text box.
 - To insert a character in the entered text line, move the cursor to the text box to select the required place and press **▼** then perform step 3.
5. Select **OK** and press the **ENTER** button to set the entered text as a name.

NOTE:

- If you have not saved any settings, **MEMORY 1 - 16** will not be displayed.

SIGNAL MODE


The current selected signal will be displayed. This is available with signals from **COMPUTER IN/ COMPONENT IN/HDMI IN** only.

NOTE:


- See "List of compatible signals" in "Technical Information" of the operating instructions.

POSITION menu

Remote control

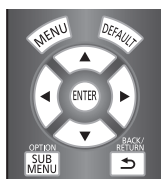

Control panel

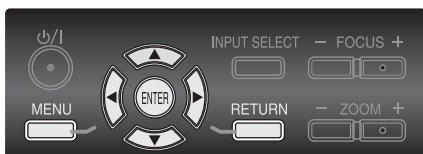

- See “Navigating through the MENU” on page 16.
- See “Menu list” on page 17.

H-POSITION

You can move the projected image horizontally for fine adjustment.

Move
left



Move
right

V-POSITION

You can move the projected image vertically for fine adjustment.


Move
down



Move
up

DOT CLOCK

If you have interference patterns of the projected image, which is sometimes referred to as moire or noise, you can minimize it by pressing ◀ ▶ to adjust the clock frequency. (Available with **RGB** signal from **COMPUTER IN** only)

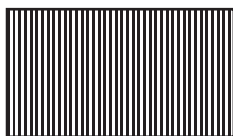

NOTE:

- If the projecting signal's dot clock frequency is higher than 150 MHz, the adjustment may not make a difference.
- **DOT CLOCK** needs to be adjusted before adjusting the **CLOCK PHASE**.

CLOCK PHASE

If you require further adjustment for the same reason as the **DOT CLOCK** adjustment, you can fine adjust the timing of the clock. Press ◀ ▶ to adjust. (Available with signals from **COMPUTER IN/COMPONENT IN** only)

NOTE:

- If the projecting signal's dot clock frequency is higher than 150 MHz, the adjustment may not make a difference.
- Available signals from **YPbPr**:
1 125 (1 080)/60i, 1 125 (1 080)/50i, 1 125 (1 080)/60p, 1 125 (1 080)/50p, 1 125 (1 080)/24p, 750 (720)/60p, 750 (720)/50p.

ASPECT

You can switch the aspect ratio manually when needed.

Aspect ratio depend on signals

Press ◀ ▶ to cycle through the aspect ratio options. The cycle pattern depends on the connected signals.
































VIDEO/ S-VIDEO	4:3 → 16:9 → s16:9 → JUST → ZOOM → AUTO NTSC, NTSC 4.43, PAL-M, PAL60 signals
	4:3 → 16:9 → s16:9 → 14:9 → ZOOM1 → ZOOM2 → JUST PAL, PAL-N, SECAM signals
HDMI	4:3 → 16:9 → s16:9 → H-FIT → V-FIT → ZOOM 1 125 (1 080)/50i, 1 125 (1 080)/60i, 1 125 (1 080)/50p, 1 125 (1 080)/60p, 1 125 (1 080)/24p, 750 (720)/50p and 750 (720)/60p signals
	4:3 → 16:9 → s16:9 → JUST → ZOOM 525p (480p) signal
	4:3 → 16:9 → s16:9 → 14:9 → ZOOM1 → ZOOM2 → JUST 625p (576p) signal
COMPUTER (RGB)/ COMPONENT (YPbPr)	4:3 → 16:9 → s16:9 → 14:9 → ZOOM1 → ZOOM2 → JUST 625i (576i), 625p (576p) signals
	4:3 → 16:9 → s16:9 → JUST → ZOOM 525i (480i), 525p (480p) signals
	4:3 → 16:9 → s16:9 → H-FIT → V-FIT → ZOOM 1 125 (1 080)/50i, 1 125 (1 080)/60i, 1 125 (1 080)/50p, 1 125 (1 080)/60p, 1 125 (1 080)/24p, 750 (720)/50p, 750 (720)/60p signals

Aspect ratio options and projection example

If you apply the aspect ratio options to the projected image, the result will be as follows. The result may differ due to the input signals.












VIDEO/S-VIDEO/COMPUTER/COMPONENT/HDMI

                               Not available with 1 125 (1 080)/50i, 1 125 (1 080)/60i, 1 125 (1 080)/50p, 1 125 (1 080)/60p, 1 125 (1 080)/24p, 750 (720)/50p and 750 (720)/60p signals.

Original size		4:3	Squeeze signal	16:9 Letter box	14:9 Letter Box	2.35:1 Cinescope
						
4:3	Projects at 4:3.					
16:9	Adjusts horizontally to 16:9.					
JUST	Adjusts horizontally to fit 16:9. Closer to edge, more enlarged. Not available with COMPUTER signals.					
ZOOM/ ZOOM1	Adjusts to 16:9 size while preserving original ratio. Escape the menu mode and press ▲ ▼ to adjust vertically. (Not available with HDMI signal.)					
ZOOM2	Adjusts to cinescope size not including letter box. Escape the menu mode and press ▲ ▼ to adjust vertically. (Not available with HDMI signal.)					
14:9	Adjusts to 14:9.					

COMPUTER/COMPONENT/HDMI

           Available with 1 125 (1 080)/50i, 1 125 (1 080)/60i, 1 125 (1 080)/50p, 1 125 (1 080)/60p, 1 125 (1 080)/24p, 750 (720)/50p and 750 (720)/60p signals.

Original size		4:3	16:9	Cinescope
				
H-FIT	Adjusts horizontally to 16:9.			
V-FIT	Adjusts to 16:9 vertically. Escape and press ▲ ▼ to scroll the image to adjust the edge vertically. (Not available with HDMI signal.)			
ZOOM	Adjusts to 16:9 size with preserving original ratio. Escape the menu mode and press ▲ ▼ to adjust vertically.			

NOTE:

- If you project an image with an unmatched aspect ratio, the image may distort or some portions may be cropped. Select an aspect ratio which preserves the intention of the image creator.
- The order of aspect type is defined not only by the input method but also by the input signals. See "List of compatible signals" in "Technical Information" of the operating instructions.
- If you project a copyrighted image enlarged or distorted by using **ASPECT** function in commercial use in a public place, such as a restaurant or hotel, you might infringe on the copyright of the creator which is protected by copyright law.

POSITION menu

WSS

WSS (Wide Screen Signalling) detects if a **PAL**/625p (576p)/625i (576i) signal is input and that signal has an identification signal, and switch the aspect ratio to required setting automatically. You can switch the system off manually. (Available with **VIDEO/S-VIDEO/COMPONENT** signals only)

OVER SCAN

If the 4 edges of an image is partly dropped, you can use this function to adjust and project it properly.

- Setting range: 0 to +10
- **OVER SCAN** is not available with **COMPUTER** signals.



KEYSTONE

If the projector is aligned non-perpendicularly to the screen, or if the projection screen has an angled surface, you can correct the keystone vertically.

Image	Operation

- Setting range: -32 to +32

NOTE:


- You can correct the distortion ± 30 degrees from the vertical plane. For a better quality image, installing the projector with minimum distortion is recommended.
- Some distortion may be retained for the lens shift adjustment.
- The distortion of the main menu screen is not correctable.
- The result of the keystone correction will affect the aspect ratio and the size of the image.

AUTO SETUP

You can adjust **V-POSITION**, **H-POSITION**, **DOT CLOCK** and **CLOCK PHASE** automatically when the computer signal is detected. Press the **ENTER** button to adjust these at the same time.

LENS CONTROL

Remote control

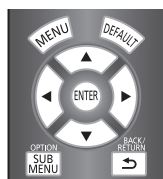

Control panel



- See “Navigating through the MENU” on page 16.
- See “Menu list” on page 17.


NOTE:

- The saved lens memory adjustment accuracy is not guaranteed.
- If the memorised **ZOOM/FOCUS** adjustment is not accurate enough, adjust the **ZOOM/FOCUS** menu again.
- If the power supply is stopped while loading or saving the lens memory, saved adjusted settings may differ from the original after restarting the projector. Adjust the **ZOOM/FOCUS** menu again.


ZOOM/FOCUS

You can use the 2 different test patterns to adjust the focus and zoom of the image.

1. Press the **ENTER** button to display test pattern 1.
 - Press **▲ ▼** to adjust the focus and **◀ ▶** to adjust the zoom.

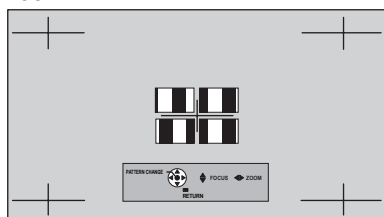

2. Press the **ENTER** button to display test pattern 2.
 - Press **▲ ▼** to adjust the focus and **◀ ▶** to adjust the zoom.

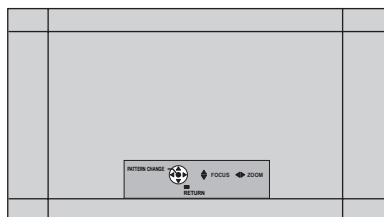

3. Press the **ENTER** button to display the projected image.
 - You can confirm the adjustment is fit to the projected image.
4. Press the **MENU** or **RETURN** button to return to the previous menu, or press repeatedly to escape the menu mode.

NOTE:

- When the projector and/or the screen is tilted, adjust the focus at the centre of the image. The upper and lower edge might be out of focus.
- When the image is distorted in keystone, adjust the **KEystone** in **POSITION** menu. See “KEystone” on page 34.

LENS MEMORY LOAD

You can access the saved lens control settings (**ZOOM/FOCUS**, **H/V-AREA POSITION**, and **MASKING AREA**) instantly.

1. Select a setting from **LENS MEMORY 1 - 6**.
2. Press the **ENTER** button to activate.

LENS MEMORY1

LENS MEMORY2

LENS MEMORY3

LENS MEMORY4

LENS MEMORY5

LENS MEMORY6

NOTE:

- The option that contains no saved adjustment will not be displayed.
- If there is no saved setting, the **LENS MEMORY LOAD** menu will not be selectable.

LENS MEMORY SAVE

You can save and name the adjusted lens control settings in the **LENS MEMORY**.

☆ LENS MEMORY1

☆ LENS MEMORY2

☆ LENS MEMORY3

☆ LENS MEMORY4

☆ LENS MEMORY5

☆ LENS MEMORY6

- Indicated with ★ is in use, and ☆ is empty.

1. Adjust **ZOOM/FOCUS**, **H/V-AREA POSITION** and **MASKING AREA**.
2. Select the **LENS MEMORY SAVE** and press the **ENTER** button.
3. Select the required memory setting and press the **ENTER** button.
4. The confirmation screen will be displayed. Select **OK** and press the **ENTER** button.
5. Name the lens memory setting.
 - Use **▲ ▼ ◀ ▶** to specify the location of the required character to enter and press the **ENTER** button.

LENS MEMORY NAME INPUT

A	B	C	D	E	F	G	H	I	J	K	L	M
N	O	P	Q	R	S	T	U	V	W	X	Y	Z
a	b	c	d	e	f	g	h	i	j	k	l	m
n	o	p	q	r	s	t	u	v	w	x	y	z
1	2	3	4	5	6	7	8	9	0	SPACE		
!	"	#	\$	%	&	'	*	+	-	/	=	?
@	^	~	(	)	<	>	[	]	{	}	,	:

ALL DELETE

OK

CANCEL

LENS CONTROL

- Repeat step 5 until you finish the text line.
 - You can enter up to 16 characters.
 - Move the cursor to **ALL DELETE** and press the **ENTER** button to delete all the entered text line.
 - Press the **DEFAULT** button to delete the last entered character or indicated with the cursor in the text box.
 - To insert a character in the entered text line, move the cursor to the text box to select the required place and press **▼** then perform step 5.
- Select **OK** and press the **ENTER** button to set the entered text as a name.

NOTE:

- If you leave the text box empty and save, the default memory number will stay as a name.

LENS MEMORY EDIT

You can edit saved lens memory settings.

Deleting a memory setting

- Select **LENS MEMORY DELETE** and press the **ENTER** button.
- Select the required lens memory setting and press the **ENTER** button.
- If you select **ALL DELETE**, you can delete all of the saved lens memory settings.
- Select **OK** in the confirmation screen and press the **ENTER** button.

Changing the name of the memory setting

- Select **LENS MEMORY NAME CHANGE** and press the **ENTER** button.
- Select the required lens memory setting and press the **ENTER** button.
- Rename the lens memory setting.
 - Use **▲ ▼ ◀ ▶** to specify the location of the required character to enter and press the **ENTER** button.
- Repeat step 3 until you finish the text line.
 - You can enter up to 16 characters.
 - Move the cursor to **ALL DELETE** and press the **ENTER** button to delete all the entered text line.
 - Press the **DEFAULT** button to delete the last entered character or indicated with the cursor in the text box.
 - To insert a character in the entered text line, move the cursor to the text box to select the required place and press **▼** then perform step 3.
- Select **OK** and press the **ENTER** button to set the entered text as a name.

NOTE:

 
- The option that contains no saved adjustment will not be displayed
- If you leave the text box empty and save, the default memory name will stay as a name.

AUTO SWITCHING

You can automatically load the saved lens memory settings which are set for each screen size. This function is able to identify the wide signal* or 16:9/4:3 and recalls the lens memory settings automatically.

* Wide signal includes: 2.35:1, 2.40:1, 2.50:1, 2.55:1

Press the **ENTER** button to display the **AUTO SWITCH** menu.




- Press **▲ ▼** to select the **IMAGE DETECTION** in the **AUTO SWITCH** menu.
- Press **◀ ▶** to select your required **LENS MEMORY** for **AUTO SWITCHING**.
 - The **LENS MEMORY** setting which has been selected for **2.35:1 IMAGE DETECTION** is loaded after a given period of time once the input signal switches from 16:9/4:3 to 2.35:1.
 - The **LENS MEMORY** setting which has been selected for **16:9 IMAGE DETECTION** is loaded after a given period of time once the input signal switches from 2.35:1 to 16:9/4:3.
- Only saved **LENS MEMORY** data will appear in the **IMAGE DETECTION** item.
- If **OFF**, the auto-identify will not be performed.
- When selecting the **ZOOM/ZOOM1/ZOOM2/V-HIT** in the **ASPECT** setting, this function will be invalid.
- When displaying the menu or test pattern, also when performing the **PICTURE** menu, auto-identify will be invalid.

NOTE:

- In the following conditions, it might take longer to identify or it might be unable to identify the correct image.
- If there is noise in the picture or external equipment generate noise, or depends on the picture images.
 - If the input signal level from the external equipment is not set to the suggested value range. Please adjust the **WAVEFORM MONITOR** settings. See page 21.
 - If the screen position is not adjusted well. Please adjust the **POSITION** settings. See page 32.

H-AREA POSITION


You can move the frame area horizontally, such as aligning the right or left frame edge to the screen edge. Press ◀ ▶ to move the frame.

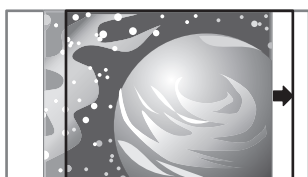

- Setting range: -63 to +63

V-AREA POSITION

You can move the frame area vertically, such as aligning the top or bottom frame edge to the screen edge. Press ▲ ▼ to move the frame.

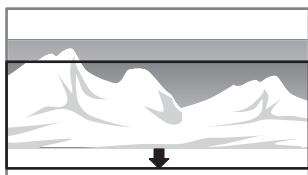

- Setting range: -63 to +63

LEFT MASKING AREA

You can place a blank (mask) area in the left side edge on the screen.



- Setting range: 0 to +70

RIGHT MASKING AREA

You can place a blank (mask) area in the right side edge on the screen.



- Setting range: 0 to +70

UPPER MASKING AREA

You can place a blank (mask) area in the upper side edge on the screen.



- Setting range: 0 to +70

LOWER MASKING AREA

You can place a blank (mask) area in the lower side edge on the screen.




- Setting range: 0 to +70

NOTE:


- If it is set to 0, each **MASKING** will be invalid.
- The **MASKING AREA** function will be invalid when adjusting the **COLOUR MANAGEMENT** or **SPLIT ADJUST** settings and displaying the **TEST PATTERN** or **WAVEFORM MONITOR**, and no signal is detected.
- You can not adjust the **MASKING** if keystone correction is performed.

FUNCTION BUTTON

Remote control

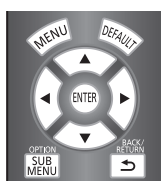

Control panel

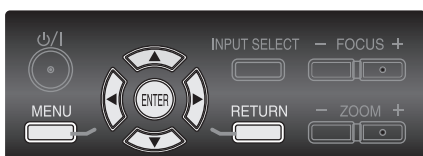

- See “Navigating through the MENU” on page 16.
- See “Menu list” on page 17.

FUNCTION BUTTON

You can assign certain menu option to the **FUNCTION** button as a shortcut. Press ▲ ▼ ◀ ▶ to select the required menu options and press the **ENTER** button.

● Assignable functions

Functions	Reference page
<u>COLOUR MANAGEMENT</u> *1	page 27
GAMMA ADJUSTMENT	page 23
SPLIT ADJUST	page 22
WAVEFORM AUTO ADJUST	page 21
FRAME CREATION	page 26
NORMAL	page 20
DYNAMIC	
COLOUR1	
COLOUR2	
CINEMA1	
CINEMA2	
CINEMA3	
TEST PATTERN	page 41
OPERATE OTHER DEVICE	Booklet
ASPECT	page 32
AUTO SETUP	page 34
CONTRAST	page 20
BRIGHTNESS	
BLANK	page 38
HDMI 1 IN	page 15
HDMI 2 IN	
HDMI 3 IN	
COMPUTER IN	
COMPONENT IN	
S-VIDEO IN	
VIDEO IN	


*1. The underlined item is factory default setting.

● BLANK function


You can stop the projection temporarily for electrical power save while the input source is stopped. Press any button to escape from the blank mode.

OPTION menu

Remote control

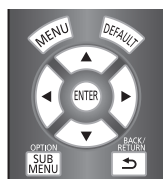

Control panel

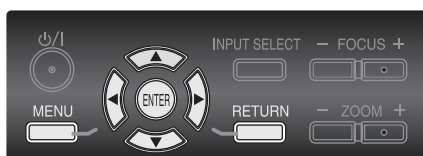

- See “Navigating through the MENU” on page 16.
- See “Menu list” on page 17.

INPUT GUIDE

When you change the input method, the guidance appears in the upper right corner of the screen. The following display methods are available. Press ◀ ▶ to cycle through the options.

Options	Function
DETAILED	Display the input method graphically. The INPUT GUIDE will disappear after 3 seconds without any operation.
SIMPLE	Display the input method by text. The INPUT GUIDE will disappear after 3 seconds without any operation.
OFF	Turn off the guidance.

OSD DESIGN

You can change the background colour of the menu. Press ◀ ▶ to cycle through the options.

- **TYPE1** Semi transparent black
- **TYPE2** Solid blue
- **TYPE3** Semi transparent dark blue

OSD POSITION

You can change the displaying position of the menu. Press ◀ ▶ to cycle through the options.

UPPER LEFT	UPPER CENTRE	UPPER RIGHT
	CENTRE	
LOWER LEFT	LOWER CENTRE	LOWER RIGHT

BACK COLOUR

You can choose a screen colour from **BLUE** or **BLACK** for when the projector is in idle. Press ◀ ▶ to select.

STARTUP LOGO

You can switch the logo on/off that is displayed when starting up the projector. Press ◀ ▶ to select the required option. **STARTUP LOGO “Panasonic”** will be displayed for 15 seconds.

- **ON:** Active
- **OFF:** Deactive

AUTO SEARCH

When the projector is turned on, the input terminals are detected and an input signal is selected automatically. You can switch the system on/off. Press ◀ ▶ to cycle through the options.

- **ON:** Active
- **OFF:** Deactive

NOTE:

- When no signal is detected, the last used input will be selected.

HDMI SIGNAL LEVEL

When an **HDMI IN** is selected, you can switch the **HDMI** signal **NORMAL** or **EXPAND** to display the image. Press ◀ ▶ to select an option.

- **NORMAL** For general HDMI equipment
- **EXPAND** For HDMI equipment with expanded signals.

NOTE:

- **HDMI SIGNAL LEVEL** is not available with some equipment.

FRAME RESPONSE

You can minimise the time delay of image displayed for the progressive signals.

- **NORMAL** Prioritise the image quality
- **FAST** Prioritise the frame response

INSTALLATION

When installing the projector, select the projection method according to the projector position. Press ◀ ▶ to cycle through the options. See “Projection method” on page 5.

FRONT/DESK	Setting on a desk/floor and projecting from front
FRONT/CEILING	Mounting on the ceiling and projecting from front
REAR/DESK	Setting on a desk/floor and projecting from rear
REAR/CEILING	Mounting on the ceiling and projecting from rear

OPTION menu

TRIGGER 1/2 SETTING

You can set the input/output function for each **TRIGGER** terminal.


There are 2 functions, **INPUT** and **OUTPUT**.

● OUTPUT function


It is possible to control the external equipment which have trigger terminals by transmitting the trigger output signal.

● INPUT function

It is possible to control the projector from external equipment by receiving the trigger input signal.

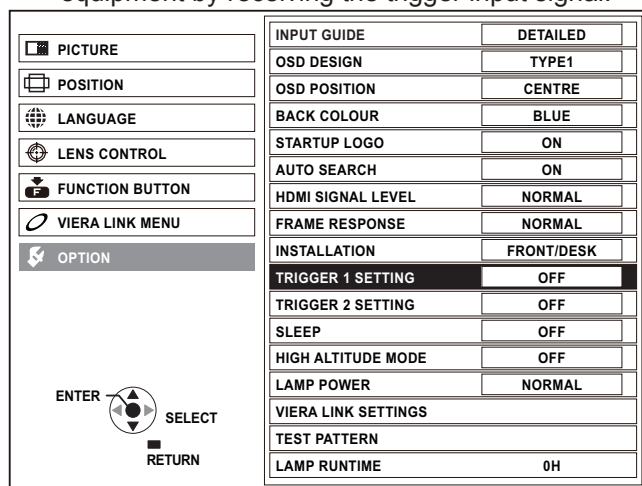

1. Select **TRIGGER 1** or **TRIGGER 2 SETTING** in the **OPTION** menu and press the **ENTER** button.

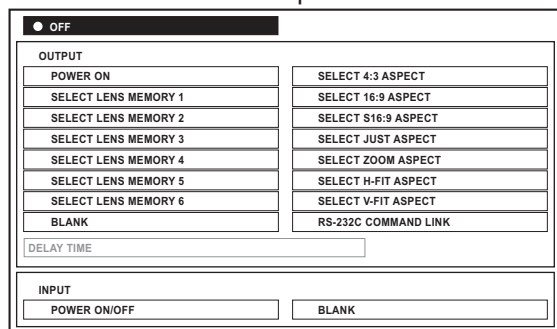

2. Press **▲ ▼ ◀ ▶** to select your required input/output function and press the **ENTER** button.

● OFF

Unable to transmit the trigger output signal.
It does not work even if trigger input signal is received.
(Enable to receive the trigger input signal)

● OUTPUT

OPTIONS	
POWER ON	SELECT 4:3 ASPECT*
SELECT LENS MEMORY 1	SELECT 16:9 ASPECT
SELECT LENS MEMORY 2	SELECT S16:9 ASPECT*
SELECT LENS MEMORY 3	SELECT JUST ASPECT
SELECT LENS MEMORY 4	SELECT ZOOM ASPECT*
SELECT LENS MEMORY 5	SELECT H-FIT ASPECT
SELECT LENS MEMORY 6	SELECT V-FIT ASPECT
BLANK	RS-232C COMMAND LINK

When the selected trigger item is chosen in the projector menu, 12 V is outputted.

• BLANK

When **BLANK** is activated, output is 12 V, but if the setting is released, output is 0 V.

• RS-232C COMMAND LINK

By receiving the command from external equipment, it conforms and outputs 12 V.

- When **AUTO** is selected in the **ASPECT** menu, it may automatically select **4:3/16:9/ZOOM ASPECT** depending on the input signal. When this matches the aspect selected in the trigger menu, 12 V is automatically output from the trigger terminal, but if other aspects are selected, output is 0 V.

● INPUT

OPTIONS	
POWER ON/OFF	BLANK

• POWER ON/OFF

If the trigger input signal from the external equipment is changed from 0 V to 12 V, the projector power will be switched on. And if it is changed from 12 V to 0 V, the power will be switched off.

• BLANK

If the trigger input signal from the external equipment is changed from 0 V to 12 V, the screen will go blank. And if it is changed from 12 V to 0 V, the **BLANK** setting will be released.


3. Press ▲ ▼ ◀ ▶ to move the cursor to **DELAY TIME** and press ◀ ▶ to set the delay time for the trigger output signal.
- It is possible to delay the trigger output signal (12 V). (Only available if Trigger **OUTPUT** item is selected.)

NOTE:

- This trigger terminal output is used for control from external equipment only. You should not use it as the power source for external equipment.
- During start up and cooling off period, projector will not accept the trigger input signal. Please input the trigger signal only after it is in the projection or standby mode.
- The trigger control is not available to use for the RS-232C command during the standby mode.

SLEEP

You can select the required duration of time and set the off timer to turn off the power of the projector automatically. 3 minutes before turn-off, the countdown of minutes will be displayed in the lower right corner. Press ◀ ▶ to cycle through the options.

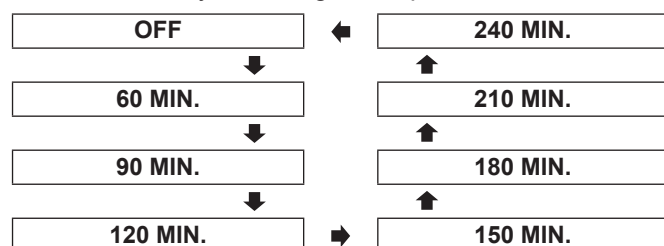

HIGH ALTITUDE MODE

If you use the projector at high elevation, the **HIGH ALTITUDE MODE** setting need to be **ON** to set the fan speed high. Press ◀ ▶ to select the required option.

- OFF** The fan speed is low.
- ON** The fan speed is high.

NOTE:

- At 1 400 - 2 700 m (4 593 - 8 858 ft) above sea level, the setting must be **ON**.
- The loudness of fan noise depends on the **HIGH ALTITUDE MODE** setting.

LAMP POWER

You can adjust the power of the lamp to save on electricity, prolong the lamp life and reduce the fun noise.

Options	Function
NORMAL	When higher luminance is required.
ECO-MODE	When lower luminance is sufficient.

NOTE:

- When no input signal is detected, the function is disabled.

VIERA LINK SETTINGS

You can set the VIERA Link settings. See “VIERA Link Connection” on page 45.

TEST PATTERN

You can display the 5 different **TEST PATTERN** images for your setting confirmation. Press the **ENTER** button to switch to the other patterns.

LAMP RUNTIME

You can check how long the lamp has been used.

NOTE:


- When **LAMP POWER** is set to **NORMAL**; and **LAMP RUNTIME** has reached 1 800 hours, **LAMP RUNTIME** menu will inform the replacing time by flashing the red and gray colour.
- LAMP RUNTIME** is a relevant matter for lamp unit replacement timing. See “Replacing the lamp unit” in “Care and Replacement” of the operating instructions.

Technical Information


Serial terminal

The serial connector which is on the connector panel of the projector conforms to the RS-232C interface specification, so that the projector can be controlled by a personal computer which is connected to this connector.

Connection

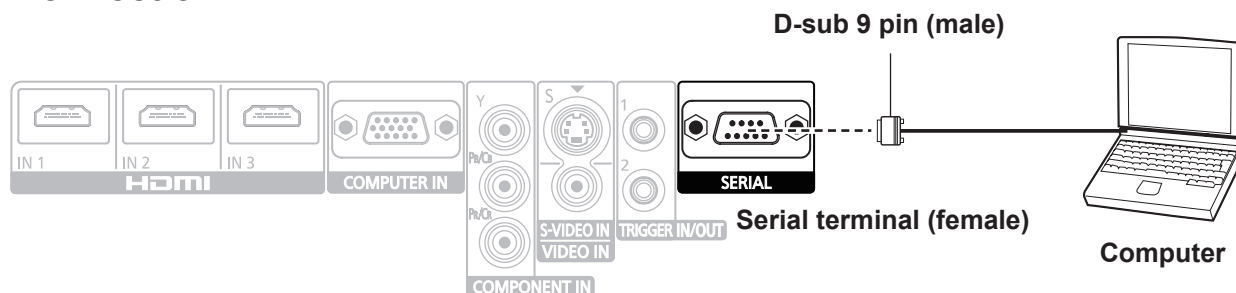

Pin assignments and signal names

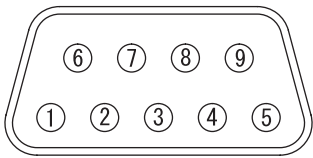	Pin No.	Signal name	Contents
	①		NC
	②	TXD	Transmitted data
	③	RXD	Received data
	④		NC
	⑤	GND	Earth
	⑥		NC
	⑦	RTS	Connected internally
	⑧	CTS	
	⑨		NC

Communication settings

Signal level	RS-232C	Character length	8 bits
Sync. method	Asynchronous	Stop bit	1 bit
Baud rate	9 600 bps	X parameter	None
Parity	None	S parameter	None

Basic format


STX	Command	:	Parameter	ETX	The data streaming from the computer will start with STX, and proceed to Command, Parameter and end with ETX. You can add the required parameter.
Start byte (02h)	3 bytes	1 bytes	1 byte - 4 bytes	End (03h)	

- The projector can not receive any command for 10 seconds after the lamp is switched on. Wait 10 seconds before sending the command.
- If sending multiple commands, check that a response has been received from the projector for one command before sending the next command.
- When a command which does not require parameters to be sent, the colon (:) is not required.
- If an incorrect command is sent from the personal computer, the ER401 command will be sent from the projector to the personal computer.

Cable specifications

(When connected to a personal computer)

Projector

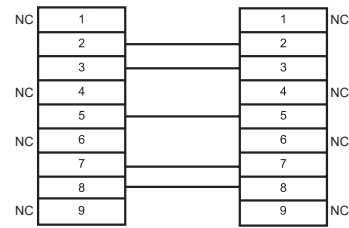

PC (DTE)

Control commands

Command	Control contents	Remarks
PON	POWER ON	In standby mode, all commands other than the PON command are ignored. The PON command is ignored during lamp ON control.
POF	POWER OFF	If a PON command is received while the cooling fan is operating after the lamp has switched off, the lamp is not turned back on again straight away in order to protect the lamp.
IIS	INPUT	CP1 = COMPONENT IN SVD = S-VIDEO IN HD1 = HDMI1 IN HD3 = HDMI3 IN VID = VIDEO IN HD2 = HDMI2 IN RG1 = COMPUTER IN
OMN	MENU	Displays the main menu.
OEN	ENTER	Activates the selected items in the menu mode.
OBK	RETURN	Returns to the previous menu or escaping from the menu mode.
OCU/OCB/OCL/OCR	Navigation buttons	OCU = ▲ cursor OCL = ◀ cursor OCD = ▼ cursor OCR = ▶ cursor
OLE	LENS	Same function as the LENS button on the remote control.
OST	DEFAULT	Resets to the factory default setting. (page 14)
OFZ	FREEZE	Freezes the projected screen. 0 = OFF 1 = ON
FC1	FUNCTION BUTTON	Activates the function that is assigned to the FUNCTION button of the remote control.
OOT	SLEEP	Sets the duration of time to turn off the power automatically. (See "SLEEP" on page 41.) 0 = OFF 1 = 60 min. 2 = 90 min. 3 = 120 min. 4 = 150 min. 5 = 180 min. 6 = 210 min. 7 = 240 min.
OSH	BLANK	Turns off the projection temporarily. Sends the command to switch between ON and OFF. Do not send the command consecutively.
OVM	PICTURE	Activates the PICTURE menu. Send the command to switch menu items. (page 13)
OWM	WAVEFORM	Activates the WAVEFORM. (page 14) 0 = OFF 1 = FULL SCAN (Y) 2 = FULL SCAN (R) 3 = FULL SCAN (G) 4 = FULL SCAN (B) 5 = SINGLE LINE SCAN (Y) 6 = SINGLE LINE SCAN (R) 7 = SINGLE LINE SCAN (G) 8 = SINGLE LINE SCAN (B)
VS1	ASPECT	Switches the aspect ratio. (page 32)
VPM	PICTURE MODE	Switches the PICTURE MODE. (page 13) NOR = NORMAL DYN = DYNAMIC CL1 = COLOUR1 CL2 = COLOUR2 CN1 = CINEMA1 CN2 = CINEMA2 CN3 = CINEMA3
OMM	MEMORY LOAD	Same function as the MEMORY LOAD button on the remote control.
DPA	PICTURE ADJUSTMENT	Same function as the PICTURE ADJUSTMENT button on the remote control.
DCM	COLOUR MANAGEMENT	Displays the COLOUR MANAGEMENT menu.
OVL	VIERA LINK	Same function as the VIERA Link button on the remote control.
OSM	SUB MENU	Same function as the SUB MENU button on the remote control.





Command	Control contents	Remarks
VXX	LENS MEMORY LOAD	Loads LENS MEMORY. LMLI0 = +00000 = LENS MEMORY 1 LMLI0 = +00002 = LENS MEMORY 3 LMLI0 = +00004 = LENS MEMORY 5 LMLI0 = +00001 = LENS MEMORY 2 LMLI0 = +00003 = LENS MEMORY 4 LMLI0 = +00005 = LENS MEMORY 6
	GAMMA ADJUSTMENT	Sets Y ADJUST. (OUTPUT) AGOS0 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		Sets R ADJUST. (OUTPUT) AGOS1 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		Sets G ADJUST. (OUTPUT) AGOS2 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		Sets B ADJUST. (OUTPUT) AGOS3 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		Sets GAMMA ADJUSTMENT. (INPUT) AGIS0 = p1p2d1d2d3 p1p2 = POINT (01 - 09) d1d2d3 = INPUT (001 - 099)
	TRIGGER 1 (OUTPUT)	Switches TRIGGER 1 (OUTPUT) when RS-232C COMMAND LINK is set in the TRIGGER 1 SETTING menu. TROI0 = +00000 = LOW TROI0 = +00001 = HIGH
	TRIGGER 2 (OUTPUT)	Switches TRIGGER 2 (OUTPUT) when RS-232C COMMAND LINK is set in the TRIGGER 2 SETTING menu. TROI1 = +00000 = LOW TROI1 = +00001 = HIGH

■ Inquiry commands

Command	Control contents	Parameter
QPW	Power status	000 = OFF 001 = ON
QFZ	FREEZE status	0 = OFF 1 = ON
QIN	INPUT signal status	CP1 = COMPONENT IN SVD = S-VIDEO IN HD1 = HDMI1 IN HD3 = HDMI3 IN VID = VIDEO IN HD2 = HDMI2 IN RG1 = COMPUTER IN
QOT	OFF TIMER status	0 = OFF 1 = 60 min. 2 = 90 min. 3 = 120 min. 4 = 150 min. 5 = 180 min. 6 = 210 min. 7 = 240 min.
QPM	PICTURE MODE status	NOR = NORMAL CN1 = CINEMA1 DYN = DYNAMIC CN2 = CINEMA2 CL1 = COLOUR1 CL2 = COLOUR2 CN3 = CINEMA3
QSH	BLANK status	0 = OFF 1 = ON
QWM	WAVEFORM status	0 = OFF 1 = FULL SCAN (Y) 2 = FULL SCAN (R) 3 = FULL SCAN (G) 4 = FULL SCAN (B) 5 = SINGLE LINE SCAN (Y) 6 = SINGLE LINE SCAN (R) 7 = SINGLE LINE SCAN (G) 8 = SINGLE LINE SCAN (B)
QVX	GAMMA ADJUSTMENT status	AGOS0 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		AGOS1 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		AGOS2 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		AGOS3 = p1p2d1d2d3d4 p1p2 = POINT (01 - 09) d1d2d3d4 = OUTPUT (0000 - 0255)
		AGIS0 = p1p2d1d2d3 p1p2 = POINT (01 - 09) d1d2d3 = INPUT (001 - 099)

VIERA Link Connection

VIERA Link (HDAVI Control™) connects projector and the equipment with VIERA Link function, and enables easy control of the home theatre equipment using the projector remote control.

- This projector supports “HDAVI Control 4” function. But available features depends on the connected equipment’s version of HDAVI Control. Please refer to the manual of the equipment to confirm the version.

Summary of VIERA Link features


VIERA Link (HDMI connection only)

Feature \ Connected equipment	DIGA Recorder with VIERA link function	DVD Player/ Blu-ray Disk Player with VIERA Link function	HD Video Camera/ LUMIX Camera with VIERA Link function
Easy playback	○	○	○
Power on link	○	○	○
Power off link	○	○	○
Reduce unnecessary power consumption in standby	○ ^{*2}	○ ^{*2}	-
Auto standby for unnecessary equipment	○ ^{*1}	○ ^{*1}	-
Control the menu of the connected equipment by projector remote control	○ ^{*1}	○ ^{*1}	○ ^{*1}
Speaker control	-	-	-

*1. Available with equipment which has “HDAVI Control 2 or later” function.

*2. Available with equipment which has “HDAVI Control 4” function.


Connection

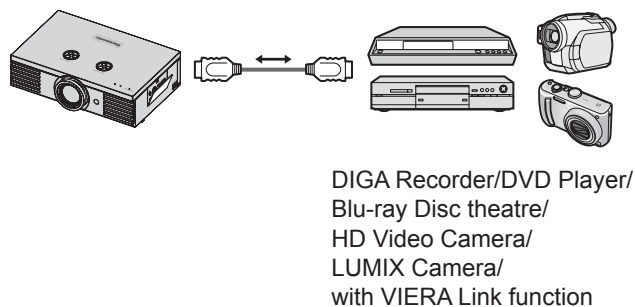

NOTE:

- VIERA Link can only be used with one display (projector, TV, etc).
- VIERA Link function features may be available even with other manufacturers' equipment supporting HDMI CEC.
- Some operations may not be available depending on the equipment. In this case, use its own remote control to operate the equipment.
(The coloured buttons operations, such as changing the date of TV program for Blu-ray Disc Recorder cannot be controlled by the projector remote control.)

To use Amplifier

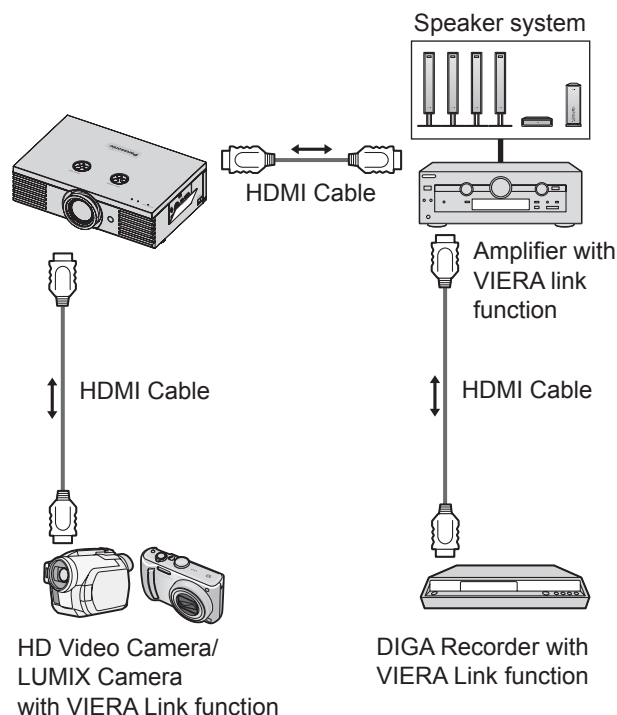

VIERA Link “HDAVI Control™”

Connections to the equipment (DIGA Recorder, HD Video Camera, Player theatre, Amplifier, etc.) with HDMI cables allow you to interface them automatically.

These features are limited to models incorporating “HDAVI Control” and “VIERA Link”.

- Some functions are not available depending on the equipment's version of HDAVI Control.
Please confirm the connected equipment's version of HDAVI Control.
But some functions will not be able to perform even if the versions are the same.
- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added.
As such, its operation with other manufacturers' equipment that supports HDMI CEC cannot be guaranteed.
- Please refer to individual manuals for other manufacturers' equipment supporting Link function.
- About applicable Panasonic equipment, consult your local Panasonic dealer.

■ Preparations

- Use fully wired HDMI compliant cable. Non-HDMI-compliant cables cannot be utilised.
- Set up the connected equipment.
 - ⇒ **Switch the connected equipment ON.**
Set VIERA LINK ON in the Setup Menu.
(Please read the manual of the equipment for these setup.)
- Set up the projector
 - ⇒ **Switch the projector ON.**
Select the input mode to HDMI1, HDMI2 or HDMI3, and make sure that an image is displayed correctly.
Select VIERA LINK SETTINGS in the OPTION menu.
If the VIERA LINK is set to ON, you need to select OFF first, and then switch to ON again to activate the ON setting.


NOTE:

This setup should be done each time when the following conditions occur:

- When using for the first time
- When adding or reconnecting equipment
- When changing setup

Option menu

Select **VIERA LINK SETTINGS** in the **OPTION** menu for the **VIERA Link** settings.

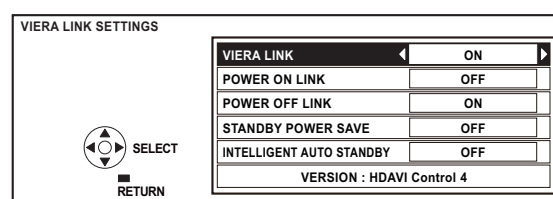

Available Features

Easy playback

Automatic Input Switching - When the connected equipment is operated, input mode is switched automatically.

POWER ON LINK

Set POWER ON LINK "ON" in the Setup Menu to use this function.

When the connected equipment is turned ON, the projector which has been linked with the connected equipment is automatically turned ON.

POWER OFF LINK

Set POWER OFF LINK "ON" in the Setup Menu to use this function.

When the projector is turned OFF and it is in standby mode, the connected equipment is also automatically set to Standby.

- This function will work even if the projector enters standby mode automatically by **SLEEP** function.

Reduce unnecessary power consumption in standby (STANDBY POWER SAVE)

Set STANDBY POWER SAVE "ON" in the Setup Menu to use this function.

The power consumption in standby mode of the connected equipment is lowered in synchronization when the projector is turned OFF to reduce power consumption.

- This function will work when **POWER OFF LINK** is set to **ON**.

Auto standby for unnecessary equipment (INTELLIGENT AUTO STANDBY)

Set INTELLIGENT AUTO STANDBY "ON (WITH REMINDER)" or "ON (NO REMINDER)" in the Setup Menu to use this function.

When the projector is ON, non-input selected connected equipment goes into standby mode automatically to reduce the power consumption.

- If you select **ON (WITH REMINDER)**, the on screen message will be displayed to be noticed before this function is activated.

NOTE:

POWER ON LINK

- Depending on the connected equipment, the projector might automatically turn ON when some functions of the connected equipment are performed. (Only when the projector is in standby mode.)
- Due to the projector's characteristics, warm up time is needed before starting the projection, so please be aware that the movie might have already started by the time the projector is fully lit.

POWER OFF LINK

- Depending on the condition of the connected equipment, such as during recording, not all power of the connected equipment will be switched off.

STANDBY POWER SAVE

- Depending on the connected equipment, when the projector is turned on, even if the power consumption setting of the connected equipment is set to the eco-standby mode, it's power consumption is increased so it can startup faster.

INTELLIGENT AUTO STANDBY

- This function may not work properly depending on the connected equipment. If required, set to **OFF**.

Index

A

ADVANCED MENU	23
ASPECT	32
AUTO SEARCH	39
AUTO SETUP	34
AUTO SWITCHING	36

B

BACK COLOUR	39
BLANK	38
BRIGHTNESS	
ADVANCED MENU	26
PICTURE menu	20

C

CINEMA REALITY	30
CLOCK PHASE	32
COLOUR	20
COLOUR MANAGEMENT	27
COLOUR TEMPERATURE	21
COMPONENT IN	
Connection	8
COMPUTER IN	
Connection	8
Connections	8
CONTRAST	
ADVANCED MENU	26
PICTURE menu	20

D

DEFAULT	
Remote control operation	14
DETAIL CLARITY	30
DOT CLOCK	32
DYNAMIC IRIS	21

F

FOCUS	
LENS CONTROL menu	35
FRAME CREATION	26
FRAME RESPONSE	39
FREEZE	
Remote control operation	14
Front leg adjusters	5
FUNCTION	
Remote control operation	15
FUNCTION BUTTON	
Main menu	38
Remote control operation	15

G

GAMMA	23
-------------	----

H

H-AREA POSITION	37
HDMI IN	
Connection	8
HDMI SIGNAL LEVEL	39
H-FIT	33
HIGH ALTITUDE MODE	41
H-POSITION	32

I

INPUT GUIDE	39
INPUT SELECT	
Remote control operation	15
INSTALLATION	
OPTION menu	39
Projection method	5

J

JUST	33
------------	----

K

KEystone	34
----------------	----

L

LAMP POWER	41
LAMP RUNTIME	41
LEFT MASKING AREA	37
LENS	
Remote control operation	13
LENS CONTROL	
Main menu	35
LENS MEMORY	
EDIT	36
LOAD	35
SAVE	35
LOWER MASKING AREA	37

M

Mains lead	
Connecting	9
MASKING AREA	37
MEMORY EDIT	31
MEMORY LOAD	31
Remote control operation	14
MEMORY SAVE	30
Menu	
Menu list	17
Navigation	16
MENU	
Remote control operation	16
MPEG NR	26

N

NR (Noise Reduction)	26
----------------------------	----

O

OPTION menu	39
OSD DESIGN	39
OSD POSITION	39
OVER SCAN	34

P

PICTURE	20
Remote control operation	13
PICTURE ADJUSTMENT	
Remote control operation	13
PICTURE MODE	20
Remote control operation	13
POSITION menu	32
Power	
Indicator status	10
Power cord secure lock	9

R

Remote control	
Operating range	13
Operation	13
RETURN	
Remote control function	16
RGB/YPbPr	30
RIGHT MASKING AREA	37

S

Screen size	4
Calculation methods	4
SERIAL	
Basic format	42
Cable specifications	43
Communication settings	42
Connection	42
Control commands	43
Inquiry commands	44
Pin assignments	42
SHARPNESS	20
SIGNAL MODE	31
SLEEP	41
SPLIT ADJUST	22
STARTUP LOGO	39
S-VIDEO IN	
Connection	8

T

Technical Information	42
TEST PATTERN	41
Throw distance	4
Throwing angle	5
TINT	20
TRIGGER	
OPTION menu	40
TV-SYSTEM	30

U

UPPER MASKING AREA	37
--------------------------	----

V

V-AREA POSITION	37
V-FIT	33
VIDEO IN	
Connection	8
VIERA Link	
Connection	45
Remote control operation	14
V-POSITION	32

W

WAVEFORM MONITOR	21
Remote control operation	14
WSS	34

X

x.v.Colour	29
------------------	----

Z

ZOOM	
ASPECT menu	33
LENS CONTROL menu	35
ZOOM1	33
ZOOM2	33
ZOOM/FOCUS	35

Trademark acknowledgements

- HDAVI Control™ is a trademark.
- VGA and XGA are trademarks of International Business Machines Corporation.
- S-VGA is a registered trademark of the Video Electronics Standards Association.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- The font used in the on-screen displays is a Ricoh bitmap font, which is manufactured and sold by Ricoh Company, Ltd.

All other trademarks are the property of the various trademark owners.

Panasonic Corporation

Web Site : <http://panasonic.net/avc/projector/>
© Panasonic Corporation 2009

P1009-1109B
TQBJ0314